

SPECTRA II

Interface Description



Copyright by Carl Valentin GmbH / 7988015A.0823

Information on the scope of delivery, appearance, performance, dimensions, and weight reflect our knowledge at the time of printing.

We reserve the rights to make modifications.

All rights, including those regarding the translation, are reserved.

No part of this document may be reproduced in any form (print, photocopy, or any other method) or edited, copied, or distributed electronically without written permission from Carl Valentin GmbH.

Due to the constant further development of our devices discrepancies between manual and device can occur.

Please check www.carl-valentin.de for the latest update.

Trademarks

All named brands or trademarks are registered brands or registered trademarks of their respective owners and may not be separately labelled. It must not be concluded from the missing labelling that it is not a registered brand or a registered trademark.

Carl Valentin label printers comply with the following safety guidelines:

CE Low-Voltage Directive (2014/35/EU)
Electromagnetic Compatibility Directive (2014/30/EU)



Carl Valentin GmbH

Postfach 3744
78026 Villingen-Schwenningen
Neckarstraße 78 – 86 u. 94
78056 Villingen-Schwenningen

Phone +49 7720 9712-0
Fax +49 7720 9712-9901

E-Mail info@carl-valentin.de
Internet www.carl-valentin.de

Table of Contents

1	Serial Data Transmission	5
1.1	Connector Assignment (9-pin DSUB Socket)	5
1.2	Connection Plan RS232	6
2	Parallel Data Transmission	7
2.1	Connection Plan	7
3	Text, Bar Code, Graphic	9
3.1	Definition of Rotation	9
3.2	Definition of Datum Point.....	9
4	Data Format.....	11
4.1	Explication	12
4.2	Definition of Field Attributes/Field Properties (optional)	13
4.3	Field Name	14
4.4	Field Selection by Free Definable Field Number.....	18
5	Mask Set	19
5.1	Text.....	19
5.2	One-Dimensional Bar Code	21
5.3	ITF Bar Code	22
5.4	PDF417	23
5.5	MAXICODE	24
5.6	DataMatrix	25
5.7	GS1 DataMatrix.....	26
5.8	CODABLOCK F.....	27
5.9	GS1 DataBar (RSS Code).....	28
5.10	QR Code.....	29
5.11	Aztec Code	30
5.12	Rectangle	31
5.13	Line.....	31
5.14	Internal Graphic.....	32
6	Text Set.....	33
6.1	Examples.....	34
7	Graphic Set	35
7.1	General Graphic Format.....	35
7.2	Graphic in PCX Format	35
7.3	Example PCX File	36
8	Variables.....	37
8.1	Set Structure.....	37
8.2	Link Field	37
8.3	Counter.....	38
8.4	Extended Counter.....	39
8.5	Date and Time	40
8.6	Format Identifier (Date & Time).....	41
8.7	Currency Variable.....	44
8.8	Shift Variable	45
8.9	User Guiding.....	46
8.10	User Guiding with Mask	47
8.11	Memory Card Data	48
8.12	GS1-128 Parser.....	48
8.13	EPC Calculation (Electronic Product Code).....	49
8.14	Check Digit	50
8.15	Substring	51

9	Parameter Sets	53
9.1	Label Parameters	53
9.2	Photocell.....	59
9.3	Printer Parameters	61
9.4	Interface.....	67
9.5	Network	69
9.6	Offset Values.....	73
9.7	Service Functions.....	75
9.8	Date & Time.....	80
9.9	Password.....	83
9.10	Compact Flash Card	85
9.11	Printing	89
9.12	Emulation.....	92
10	Parameter Sets for Options	93
10.1	WLAN (Wireless Local Area Network)	93
10.2	Cutter	97
10.3	Dispenser I/O.....	100
10.4	Scanner	106
11	Configuration & Status	109
11.1	Autostatus.....	110
12	Monitored Printing.....	113
12.1	Short Introduction	113
12.2	Parameter Sets (Host – Printer)	113
12.3	Direct Enquiry	114
12.4	Answer Sets (Printer – Host).....	114
12.5	Sample Label.....	116
13	Font Examples	117
13.1	Bitmap Fonts (Not Proportional).....	117
13.2	Bitmap Fonts (Proportional)	117
13.3	Vector Fonts	117
14	Index	119

1 Serial Data Transmission



1.1 Connector Assignment (9-pin DSUB Socket)





Pin	Signal	Description
2	T x D	Transmitting data line
3	R x D	Receiving data line
5	GND	GND signal
7	CTS	HW Handshake
8	RTS	HW Handshake

1.2 Connection Plan RS232

Software Handshake

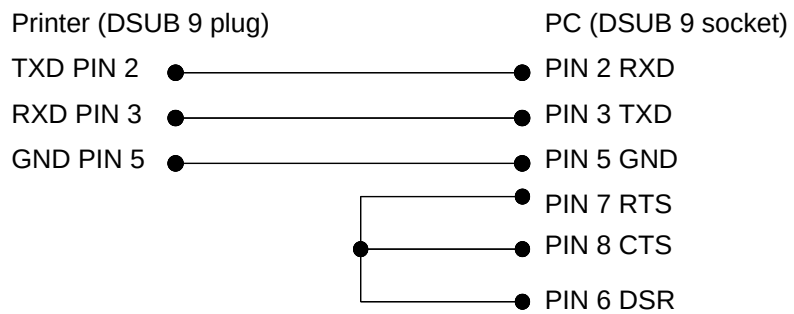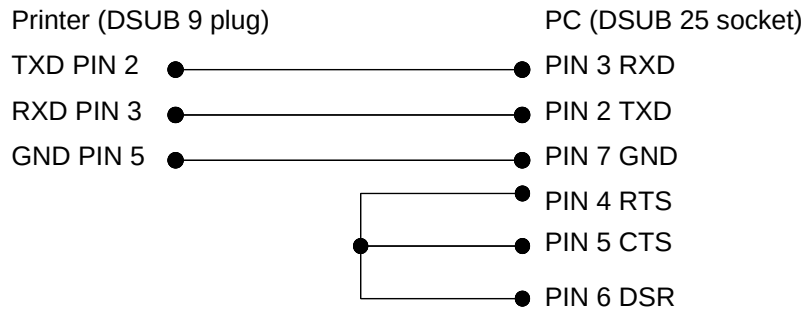

Hardware Handshake

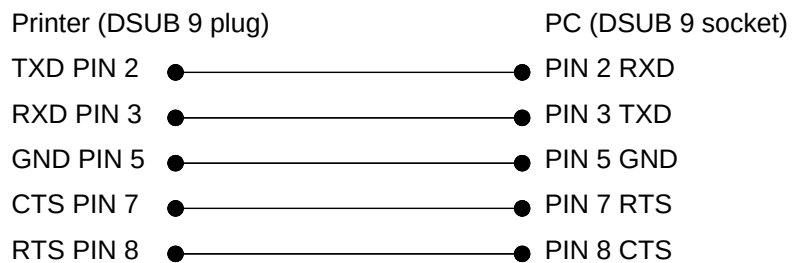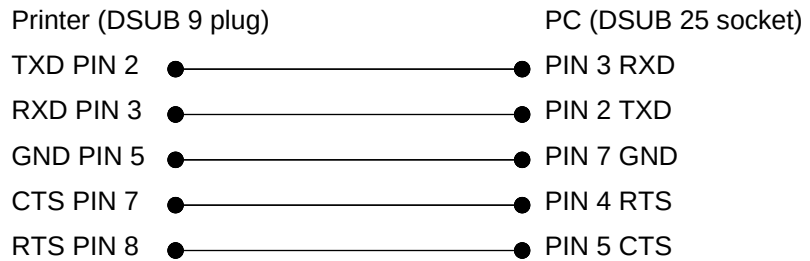


2 Parallel Data Transmission

2.1 Connection Plan

Signal Pin no.	Signal name	Direction	Function
1	<u>STROBE</u>	(Input)	The <u>STROBE</u> signal indicates that data can be received. The impulse width to the receiving line has to be 0,5 μ s at least.
2	DATA 0	(Input)	The signals are data bits sent to the printer. A HIGH level corresponds to logical 1 and a LOW level to logical 0.
3	DATA 1	(Input)	
4	DATA 2	(Input)	
5	DATA 3	(Input)	
6	DATA 4	(Input)	
7	DATA 5	(Input)	
8	DATA 6	(Input)	
9	DATA 7	(Input)	
10	ACK/	(Output)	An impulse of approx. 12 μ s confirms data input for a LOW level and signals the further listening watch of the printer.
11	BUSY	(Output)	A HIGH level indicates that the printer cannot receive any data. On the following conditions the signal HIGH is possible: 1) for data input (impulse for each sign) 2) during a printing process 3) in Offline status 4) for printer failures
12	PE	(Output)	A HIGH level indicates that paper is used up.
13	SELECT	(Output)	High Online
14	AUTOFEED	(Output)	Signal goes to LOW, in case 1) the paper is used up 2) the printer is Offline or 3) an error occurs.
15	FAULT/		
16	INIT/	(Input)	A LOW level initializes the printer
17	SELECTIN/	(Input)	A LOW level informs the printer to be addressed
18-25	GND		

3 Text, Bar Code, Graphic


3.1 Definition of Rotation

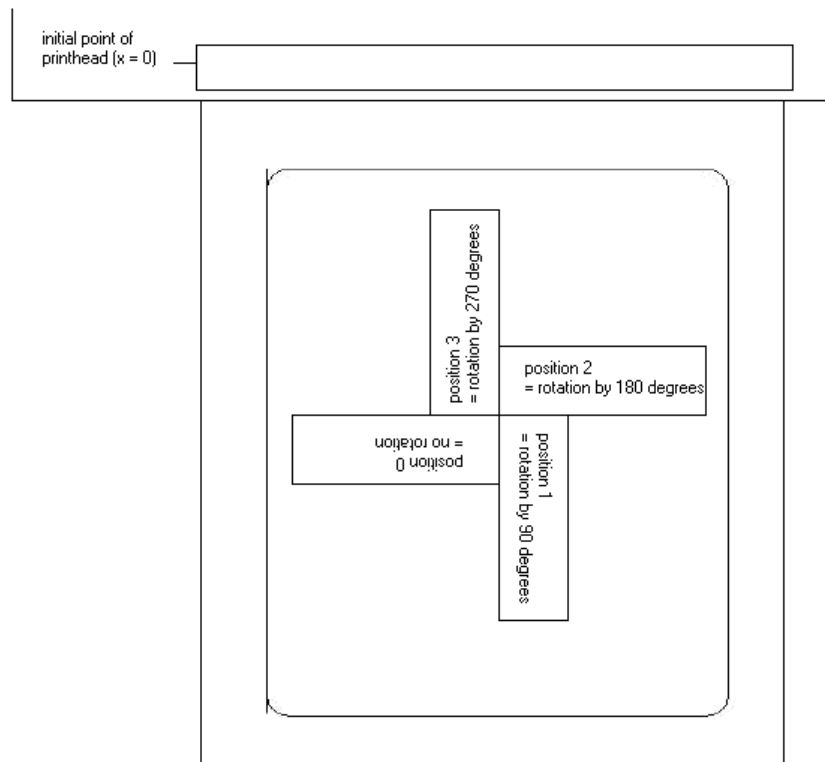

3.2 Definition of Datum Point

The so-called datum point is the relation point for indication of position. In the meantime the datum point is also the point at which the selected object is rotated.

To determine the datum point in the mask sets, the possible datum points are numbered from left top (1) to right bottom (9). The default datum point is left bottom (7). This datum point is also used even if no indication is found in the mask set.

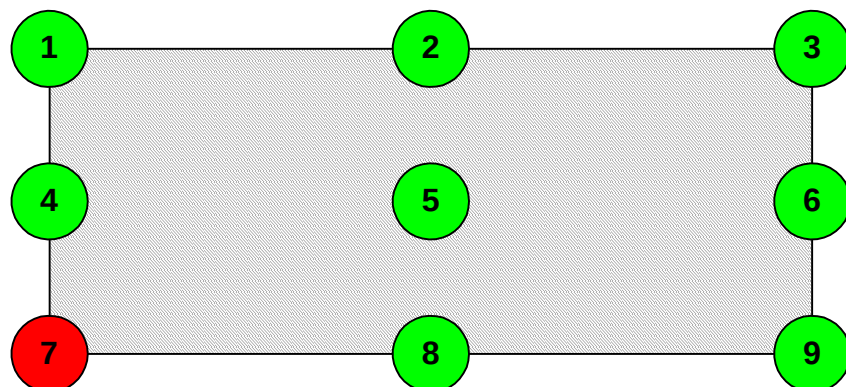

4 Data Format

The data format consists of four parties:

- Mask set
- Text
- Graphic
- Command

For a n-line label the following has to be transmitted:

- n - mask sets
- n - text sets
- n - graphic sets (if necessary)
- 1 - command set



NOTICE!

The command set always has to be transmitted at the end!

To each text on a label belong one MASK SET and one TEXT SET with the same field number.

To each code on a label belong one MASK SET, one TEXT SET and one CODE SET with the same field number.

To each box or line on a label belongs only one MASK SET.

To each graphic on a label belong several GRAPHIC SETS according to its size res. height, e.g. a graphic with a height of 10 mm needs 80 graphic sets.

Examples

Label with 3 lines of text:	3 mask sets
	3 text sets
	1 command set

Label with 2 lines of text, 1 box and 3 lines	6 mask sets
	2 text sets
	1 command set

For ALL data sets the following is valid:

Each set starts with

SOH = start of header → HEX format 01

Each set ends with

ETB = end of data transmission block → HEX-Format 17

Alternatively it is possible to set SOH to 5E_{HEX} and ETB to 5F_{HEX}. This is necessary if the connected system (e.g. UNIX) cannot transfer control signs.

All other data sets → ASCII format, but they will be transmitted as hexadecimal characters.

Example

A = identification of mask set - transmission: 41_{HEX}

n = field number '01' - transmission: 30_{HEX}, 31_{HEX}

4.1 Explication

x coordinate: Distance from right label rim in mm
Measured from the right label rim up to the lower left point of the corresponding line

y coordinate: Distance from upper label rim in mm
Measured from the beginning of the label down to the lower left point of the corresponding line

Bitmap fonts (not proportional)

01 = Font 01	0,8 x 1,1 mm	127 characters
02 = Font 02	1,2 x 1,7 mm	255 characters
03 = Font 03	1,8 x 2,6 mm	255 characters
04 = Font 04	4,0 x 5,6 mm	127 characters
05 = Font 05	1,8 x 3,2 mm (descender)	255 characters
06 = Font 06	1,5 x 2,9 mm	127 characters
07 = Font 07	1,2 x 2,2 mm (descender)	255 characters

Bitmap fonts (proportional)

21 = Font 21	(1,0; 13)	255 characters
22 = Font 22	(1,8; 21)	255 characters
23 = Font 23	(2,6; 31)	255 characters
24 = Font 24	(5,6; 67)	255 characters
28 = Font 28	(4,0; 48)	255 characters
29 = Font 29	(0,8; 9)	255 characters



NOTICE!

In order to reach best print results it is recommended always to choose the biggest possible font.

Vector fonts (proportional)

When in mode 'proportional text', the height and width of text have to be entered in mm.
These values refer to the capital 'M', i.e. the values of other characters are changing in proportion.

Vector fonts (autoscale)

When in autoscale mode, height and width of text has to be entered in mm.
The height of the text refers to all capital letters. When using small characters and descenders the height is changing in proportion. When entering the width, the complete file has to be considered. The text will be adjusted automatically, which means that the width of the characters is changing.

4.2 Definition of Field Attributes/Field Properties (optional)

Explanation

Additionally, to mask set 'AM[] ...' the possibility was created to define further field properties. In order to achieve a high flexibility, the field properties received own names/identifications. Therefore, the sequence as well as the number of field properties is free. If necessary, the mask set 'AC[]' is transferred additionally to mask set 'AM[]' to the printer.

Structure mask set

(SOH)AC[]at1=*value*;at2= *value*;...(ETB)

Attribute (at):	Description
BT BW QZ	ITF 14 (see page 22) bearer bar type bearer bar width quiet zone in 1/100 mm
NAME	Field name (see page 14) definition of field name
FN	Field number (see page 18) Free definable field number


This table is constantly extended. The current version is available on demand.

4.3 Field Name

Application (customized)

When label printers are connected to a computer system or machine controls, there is often the requirement that variable data is to be inserted into an existing layout. This data contents come from the superordinate computer system (database) or a machine control (e.g. PLC, scale, ERP system, etc.). Basically, it was always possible to integrate variable data into a 'loaded' layout (mask). The access to certain fields has been effected via the field index, i.e. a consecutive number. This field index is generated by Labelstar Office and can also change with layout changes, whereby the data allocation to the computer system/control is no longer correct.

Exmple

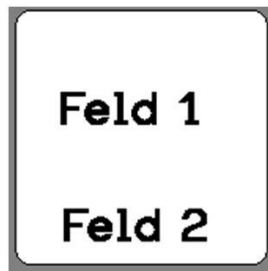

Print data

```
...
// TEXT (1/100 mm)
(SOH)AM[1]2405;803;0;1;2;4;1;1;0(ETB)
(SOH)BM[1]Feld 1(ETB)
// TEXT (1/100 mm)
(SOH)AM[2]421;856;0;1;2;4;1;1;0(ETB)
(SOH)BM[2]Feld 2(ETB)
// LINES: 2
...
```

The print data contains the definitions for the two text fields. The field index is always in '[']' of the mask or text setting.

If the text field 'Feld 1' is deleted on the label and then recreated, it gets a new index. In this case '2'. The text field 'Feld 2' gets the index '1'. As a result, an assignment via the field index is used only to a limited extend, without manual post-processing of the layout data.

Explanation

As an alternative to the field index, the assignment can also be made via the field name. A change in the field index has no longer any influence, and a changed layout is still filled in the right places with variable data of the computer system/control system.

Labelstar Office: The print data is supplemented by the following line:

(SOH)AC[1]NAME="*Field name*"(ETB)

The field content defined via the text block can be changed by the computer system/control with the following command:

(SOH)BV[*Field name*]Feld 2(ETB)

This results in the following standard procedure for the connection to a high-level control and/or computer system.

Label design with Labelstar Office


The field names are automatically transferred by Labelstar Office.

The screenshot shows the 'Properties' dialog box with the following sections and values:

- Appearance:**
 - Font: Helvetica Bold, 4
 - Inverted: ☐ No
 - Line spacing: 0.00 mm
 - Text alignment: Left
 - Text color: ☐ Black
 - [More Settings...](#)
- Behavior:**
 - Locked: ☐ No
 - Log: ☐ No
 - Printable: ☒ Yes
 - Word wrap: ☐ No
- Data:**
 - Status: OK
 - Text: externally filled
 - [Text Editor...](#)
 - [Additional Commands...](#)
- General:**
 - Name: Field1 (indicated by a green arrow)
- Layout:**
 - Base point: Top left



The desired field name (Field1) is entered in the properties of the text field.

For text fields, a printer-internal font must be used. The printer-internal fonts are marked by a printer symbol in the list.

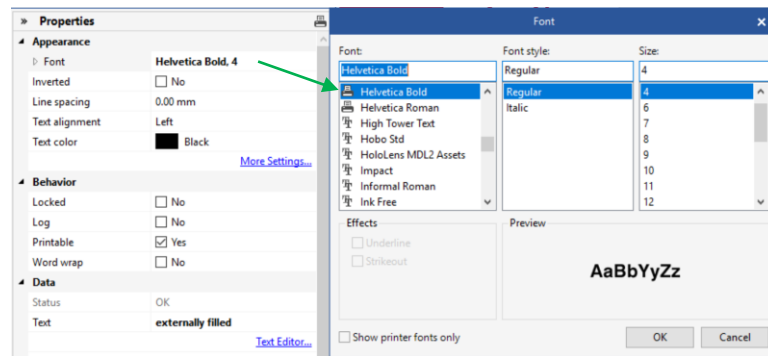

Export to a print file and save the layout in the external controller

When the label design is finished, the label is exported to a print file. For this, Labelstar Office uses the function **File – Export – Create Print Template**.

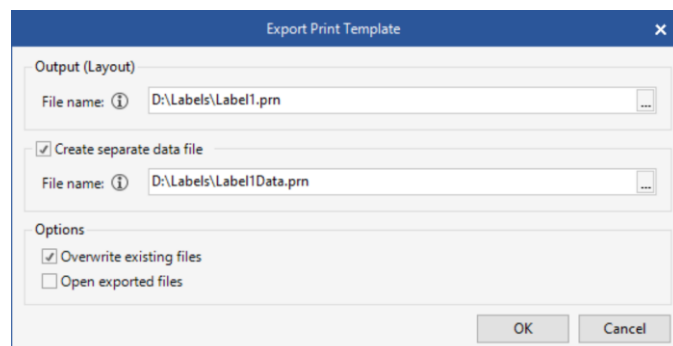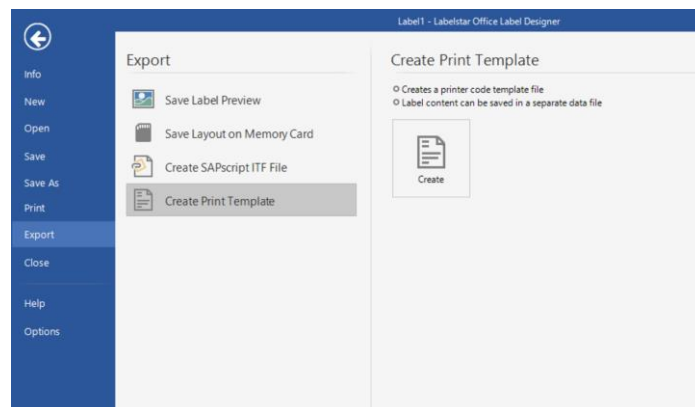


The option **Create separate data file** must be selected, otherwise the line (SOH)**FBC---r-----**(ETB) is included in the print file, which would immediately release a print procedure.

By starting a print procedure, this print file (layout definition / mask definition) is transferred from the controller/computer system to the printer first.

Save the layout on the memory card of the printer

As an alternative to 'Export to a print file' the label layout is saved on the memory card of the printer. For this, the memory card tool from Labelstar Office can be used.

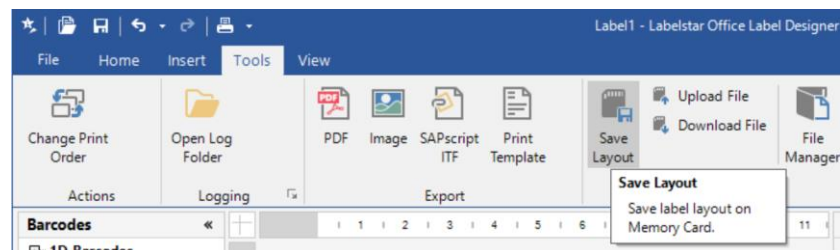

The layout must be called by the controller/computer system **before** filling the variable fields.

The following parameter set is used:

(SOH)**FMA---rfilename**(ETB)

The path name is determined when saving and possibly contains a path.

Example: "A:\Standard\eti1".

Filling the variable fields by the controller/computer system

The higher-level control can select the variable fields by the field names and set the contents. Subsequently, the print job is restarted.

Example	(SOH)FMB---rfilename(ETB)	Loading the layout from mc
	(SOH)BV[ArtBez]screws(ETB)	Filling the field "ArtBez" with "screws"
	(SOH)BV[ArtNr]123456789(ETB)	Filling the field "ArtNr" with "123456789"
	(SOH)FBC---r------(ETB)	Start printing

4.4 Field Selection by Free Definable Field Number

With the following described attribute it is possible to assign a free definable field number to a field. This field number does not have to be clear, i.e. several fields can have the same field number. In this way the same field contents can be assigned to different fields.

The following attribute identification is defined:

Attribute: **FN**

Description: free definable field number

After the field number was assigned with AC mask statement,

(SOH) AC [n] FN=nr (ETB)

n = field index

nr = free definable field number

it is possible to access to the field and/or the fields with the new BF text statement:

(SOH) BF [nr] text (ETB)

nr = field number

text = field contents

Example

```
// Assignment of field number field 1 and field 2
(SOH)AM[1]1000;2500;0;4;2;7;400;400;0(ETB)
(SOH) AC [1] FN=100 (ETB)
(SOH)AM[2]2000;2500;0;30;2;4000;9;3;0;1(ETB)
(SOH) AC [2] FN=100 (ETB)

// Access to field 1 and field 2 by field number
(SOH) BF [100] 1234567890 (ETB)
```

5 Mask Set

5.1 Text

AM[n]y;x;p;a;d;z;dy;dx;lp;dp	
A	identification for mask set
M	identification for protocol version
n	field number
y	Y coordinate in 1/100 mm
x	X coordinate in 1/100 mm
p	identification for phantom field 0 = print 1 = no print
a	identification for field type 1 = bitmap font 2 = bitmap font inverse 4 = vector font 5 = vector font autoscale 6 = vector font inverse 7 = vector font autoscale inverse
d	rotation 0 = 0° 2 = 180° 1 = 90° 3 = 270°
z	character set not proportional bitmap fonts (1+2) 01 = FONT 01 0,8 x 1,1 mm 127 characters 02 = FONT 02 1,2 x 1,7 mm 255 characters 03 = FONT 03 1,8 x 2,6 mm 255 characters 04 = FONT 04 4,0 x 5,6 mm 127 characters 05 = FONT 05 1,8 x 3,2 mm - descender 255 characters 07 = FONT 07 1,2 x 2,2 mm - descender 255 characters
	character set proportional bitmap fonts (1+2) 21 = FONT 21 1,0 mm; 13 Pixel 255 characters 22 = FONT 22 1,8 mm; 21 Pixel 255 characters 23 = FONT 23 2,6 mm; 31 Pixel 255 characters 24 = FONT 24 5,6 mm; 67 Pixel 255 characters 28 = FONT 28 4,0 mm; 48 Pixel 255 characters 29 = FONT 29 0,8 mm; 9 Pixel 255 characters
	character set vector fonts (4-7) 01 = Helvetica Bold 02 = Helvetica Bold italics 03 = Helvetica Roman 04 = Helvetica Roman italics 05 = Swiss Light 06 = Swiss Light italics 07 = Baskerville 08 = Baskerville italics 09 = Brush Script 10 = Brush Script italics 11 = Monospace 12 = Monospace italics 17 = OCR-A 18 = OCR-A italics 19 = OCR-B 20 = OCR-B italics

dy	extension in direction Y bitmap fonts factor 0..9 vector fonts character size in 1/100 mm vector fonts autoscale field height
dx	extension in direction X bitmap fonts factor 0-9 vector fonts character size in 1/100 mm vector fonts autoscale field width
lp	distance between single characters in 1/100 mm
dp	datum point 1 = left top 2 = centre top 3 = right top 4 = left centre 5 = centre centre 6 = right centre 7 = left bottom (default) 8 = centre bottom 9 = right bottom

5.2 One-Dimensional Bar Code

AM[n]y;x;p;a;d;h;v1;v2;pz;z;dp					
A	identification for mask set				
M	identification for protocol version				
n	Field number				
y	Y position in 1/100 mm				
x	X position in 1/100 mm				
p	identification for phantom field 0 = print 1 = no print				
a	Identification for field type 30 = Code 39 31 = Code 2/5 interleaved 32 = EAN 8 33 = EAN 13 34 = UPC A 35 = UPC E 36 = CODABAR 37 = Code 128 38 = EAN ADD ON 39 = GS1-128 40 = Code 93 41 = PZN 7 42 = 2/5 Industrie 43 = Leitcode 44 = Identcode 46 = Code 39 extended 47 = Code 128 A 48 = Code 128 B 49 = Pharmacode 60 = PZN 8 62 = USPS Intelligent Mail 63 = POSTNET				
d	Rotation 0 = 0° 1 = 90° 2 = 180° 3 = 270°				
h	symbol height in 1/100 mm				
v1	relation 1; module width 'THICK'				
v2	relation 2; module width 'THIN' and/or SC factor				
pz	check digit calculation 0 = no check digit calculation 1 = check digit calculation 4 = inverse - no check digit calculation 5 = inverse - check digit calculation				
z	human readable line 0 = no human readable line 1 = with human readable line				
dp	datum point 1 = left top 2 = centre top 3 = right top 4 = left centre 5 = centre centre 6 = right centre 7 = left bottom (default) 8 = centre bottom 9 = right centre				

5.3 ITF Bar Code

AM[n]y;x;p;a;d;h;v1;v2;pz;z;dp			
A	identification for mask set		
M	identification for protocol version		
n	Field number		
y	Y position in 1/100 mm		
x	X position in 1/100 mm		
p	identification for phantom field 0 = print 1 = no print		
a	identification for field type 56 = ITF 14		
d	rotation 0 = 0° 1 = 90° 2 = 180° 3 = 270°		
h	symbol height in 1/100 mm		
v1	relation 1; module width 'THICK'		
v2	relation 2; module width 'THIN' and/or SC factor		
pz	check digit calculation 0 = no check digit calculation 1 = check digit calculation 4 = inverse - no check digit calculation 5 = inverse - check digit calculation		
z	human readable line 0 = no human readable line 1 = with human readable line		
dp	datum point 1 = left top 2 = centre top 3 = right top 4 = left centre 5 = centre centre 6 = right centre 7 = left bottom (default) 8 = centre bottom 9 = right centre		

In order to print the bearer bars of an ITF 14 barcode, the following additional properties for Code 2/5 interleaved must be set:

For this the following field properties are determined:

Property identifier	Description
BT	bearer bar type 0 = no bars 1 = above/below 2 = rectangle
BW	bearer bar width in 1/100 mm
OZ	quiet zone in 1/100 mm

Example

```
// BARCODE (1/100 mm)
(SOH)AM[1]4498;7076;0;31;2;3000;12;4;0;1;3(ETB)
(SOH)AC[1]BT=2;BW=150;QZ=600(ETB)
(SOH)BM[1]1234567890123(ETB)
```



5.4 PDF417

AM[n]y;x;p:a;d;s;rw;rh;ec;z;dp;c;r	
A	identification for mask set
M	identification for protocol version
n	Field number
y	Y position in 1/100 mm
x	X position in 1/100 mm
p	identification for phantom field 0 = print 1 = no print
a	identification for field type 50 = PDF417
d	rotation 0 = 0° 1 = 90° 2 = 180° 3 = 270°
s	symbol size
rw	relation width
rh	relation height
ec	error correction level 0 - ECC Level = 0 1 - ECC Level = 2 2 - ECC Level = 6 3 - ECC Level = 14 4 - ECC Level = 30 5 - ECC Level = 62 6 - ECC Level = 126 7 - ECC Level = 254 8 - ECC Level = 510
z	style 0 = standard 1 = truncated 2 = naked 3 = bare
dp	datum point 1 = left top 2 = centre top 3 = right top 4 = left centre 5 = centre centre 6 = right centre 7 = left bottom (default) 8 = centre bottom 9 = right bottom
c	number of columns 0 = automatic, 1-30
r	number of rows 0 = automatic, 3-90

5.5 MAXICODE

AM[n;y;x;p;a;d;0;sn;ns;m;0;dp	
A	identification for mask set
M	identification for protocol version
n	field number
y	Y position in 1/100 mm
x	X position in 1/100 mm
p	identification for phantom field 0 = print 1 = no print
a	identification for field type 51 = MAXICODE
d	rotation 0 = 0° 1 = 90° 2 = 180° 3 = 270°
0	dummy
sn	symbol number
ns	quantity of symbols
m	mode 2 = Structured Message (US Carrier) 3 = Structured Message (International Carrier) 4 = Default message
0	dummy
dp	datum point 1 = left top 2 = centre top 3 = right top 4 = left centre 5 = centre centre 6 = right centre 7 = left bottom (default) 8 = centre bottom 9 = right bottom

5.6 DataMatrix

AM[n]y;x;p;a;d;s;aw;ah;ec;f;dp	
A	identification for mask set
M	identification for protocol version
n	field number
y	Y position in 1/100 mm
x	X position in 1/100 mm
p	identification for phantom field 0 = print 1 = no print
a	identification for field type 52 = DataMatrix
d	rotation 0 = 0° 1 = 90° 2 = 180° 3 = 270°
s	symbol size in 1/100 mm
aw	relation width
ah	relation height
ec	Error Correction 0 - ECC Type = 0 ECC Level = 0 Overhead = 0 % 1 - ECC Type = 2* ECC Level = 40 Overhead = 33 % 2 - ECC Type = 3 ECC Level = 50 Overhead = 25 % 3 - ECC Type = 6 ECC Level = 80 Overhead = 33 % 4 - ECC Type = 8 ECC Level = 100 Overhead = 50 % 5 - ECC Type = 9* ECC Level = 110 Overhead = 75 % 6 - ECC Type = 10* ECC Level = 120 Overhead = 50 % 7 - ECC Type = 11* ECC Level = 130 Overhead = 67 % 8 - ECC Type = 12 ECC Level = 140 Overhead = 75 % 9 - ECC Type = 26 ECC Level = 200 Overhead = 0 %
f	format ID of data 0 - Format ID = 11 (numeric, 2000 characters)* 1 - Format ID = 1 (numeric, 500 characters) 2 - Format ID = 2 (alphabetical, 500 characters) 3 - Format ID = 3 (alphabetical + pointers, 500 characters) 4 - Format ID = 4 (alphanumeric, 500 characters) 5 - Format ID = 5 (7 Bit, 500 characters) 6 - Format ID = 6 (8 Bit, 500 characters) 7 - Format ID = 7 (pre-programmed, 500 characters)* 8 - Format ID = 12 (alphabetical, 2000 characters) 9 - Format ID = 14 (alphanumeric, 2000 characters)
dp	datum point 1 = left top 2 = centre top 3 = right top 4 = left centre 5 = centre centre 6 = right centre 7 = left bottom (default) 8 = centre bottom 9 = right bottom

* not supported from printer

5.7 GS1 DataMatrix

AM[n]y;x;p;a;d;s;aw;ah;ec;f;dp	
A	identification for mask set
M	identification for protocol version
n	field number
y	Y position in 1/100 mm
x	X position in 1/100 mm
p	identification for phantom field 0 = print 1 = no print
a	identification for field type 59 = GS1 DataMatrix
d	rotation 0 = 0° 1 = 90° 2 = 180° 3 = 270°
s	symbol size in 1/100 mm
aw	relation width
ah	relation height
ec	Error Correction 0 - ECC Type = 0 ECC Level = 0 Overhead = 0 % 1 - ECC Type = 2* ECC Level = 40 Overhead = 33 % 2 - ECC Type = 3 ECC Level = 50 Overhead = 25 % 3 - ECC Type = 6 ECC Level = 80 Overhead = 33 % 4 - ECC Type = 8 ECC Level = 100 Overhead = 50 % 5 - ECC Type = 9* ECC Level = 110 Overhead = 75 % 6 - ECC Type = 10* ECC Level = 120 Overhead = 50 % 7 - ECC Type = 11* ECC Level = 130 Overhead = 67 % 8 - ECC Type = 12 ECC Level = 140 Overhead = 75 % 9 - ECC Type = 26 ECC Level = 200 Overhead = 0 %
f	format ID of data 0 - Format ID = 11 (numeric, 2000 characters)* 1 - Format ID = 1 (numeric, 500 characters) 2 - Format ID = 2 (alphabetical, 500 characters) 3 - Format ID = 3 (alphabetical + pointers, 500 characters) 4 - Format ID = 4 (alphanumeric, 500 characters) 5 - Format ID = 5 (7 Bit, 500 characters) 6 - Format ID = 6 (8 Bit, 500 characters) 7 - Format ID = 7 (pre-programmed, 500 characters)* 8 - Format ID = 12 (alphabetical, 2000 characters) 9 - Format ID = 14 (alphanumeric, 2000 characters)
dp	datum point 1 = left top 2 = centre top 3 = right top 4 = left centre 5 = centre centre 6 = right centre 7 = left bottom (default) 8 = centre bottom 9 = right bottom

* not supported from printer

5.8 CODABLOCK F

AM[n]y;x;p;a;d;h;nc;nl;m;s;dp	
A	identification for mask set
M	identification for protocol version
n	field number
y	Y position in 1/100 mm
x	X position in 1/100 mm
p	identification for phantom field 0 = printout 1 = np printout
a	identification for field type 53 = CODABLOCK F
d	rotation 0 = 0° 1 = 90° 2 = 180° 3 = 270°
h	line height in symbol
nc	quantity of characters/line
nl	quantity of lines
m	mode
s	module size
dp	datum point 1 = left top 2 = centre top 3 = right top 4 = left centre 5 = centre centre 6 = right centre 7 = left bottom (default) 8 = centre bottom 9 = right bottom

5.9 GS1 DataBar (RSS Code)

AM[n]y;x;p;a;d;s;m;k;t;0;dp	
A	identification for mask set
M	identification for protocol version
n	field number
y	Y position in 1/100 mm
x	X position in 1/100 mm
p	identification for phantom field 0 = print 1 = no print
a	identification for field type 54 = GS1 DataBar (RSS)
d	rotation 0 = 0° 1 = 90° 2 = 180° 3 = 270°
s	number of segments per line [2..22]
m	module width [1 ...12]
k	separator height [1,2]
t	symbol type 1 = GS1 DataBar Omnidirectional (RSS-14) 2 = GS1 DataBar Truncated (RSS-14 Truncated) 3 = GS1 DataBar Stacked (RSS-14 Stacked) 4 = GS1 DataBar Stacked Omnidirectional (RSS-14 Stacked Omnidirectional) 5 = GS1 DataBar Limited (RSS Limited) 6 = GS1 DataBar Expanded (RSS Expanded)
0	not used
dp	datum point 1 = left top 2 = centre top 3 = right top 4 = left centre 5 = centre centre 6 = right centre 7 = left bottom (default) 8 = centre bottom 9 = right bottom

5.10 QR Code

AM[n;y;x;p;a;d;mo;cs;ms;cw;ec;dp]	
A	identification for mask set
M	identification for protocol version
n	field number
y	Y position in 1/100 mm
x	X position in 1/100 mm
p	identification for phantom field 0 = print 1 = no print
a	identification for field type 57 = QR Code
d	rotation 0 = 0° 1 = 90° 2 = 180° 3 = 270°
mo	code model 1 = Code Model 1 2 = Code Model 2
cs	character set N = numeric A = alphanumeric B = 8-bit byte K = kanji
ms	masking -1 = auto 0-7 = mask x 8 = no masking
cw	line width in 1/100 mm per module possible values: 0-800
ec	error correction (restoring capacity) L = 7 % M = 15 % Q = 25 % H = 30 %
dp	datum point 1 = left top 2 = centre top 3 = right top 4 = left centre 5 = centre centre 6 = right centre 7 = left bottom (default) 8 = centre bottom 9 = right bottom

5.11 Aztec Code

AM[n]y;x;p;a;d;h;f;ec;m;0;dp	
A	identification for mask set
M	identification for protocol version
n	field number
y	Y position in 1/100 mm
x	X position in 1/100 mm
p	identification for phantom field 0 = print 1 = no print
a	identification for field type 61 = Aztec Code
d	rotation 0 = 0° 1 = 90° 2 = 180° 3 = 270°
h	symbol size in 1/100 mm (max 1 cm)
f	format 0 = Auto 1 = C15xC15 Compact 2 = C19xC19 Compact 3 = C23xC23 Compact 4 = C27xC27 Compact 5 = C19xC19 6 = C23xC23 7 = C27xC27 8 = C31xC31 9 = C37xC37 10 = C41xC41 11 = C45xC45 12 = C49xC49 13 = C53xC53 14 = C57xC57 15 = C61xC61 16 = C67xC67 17 = C71xC71 18 = C75xC75 19 = C79xC79 20 = C83xC83 21 = C87xC87 22 = C91xC91 23 = C95xC95 24 = C101xC101 25 = C105xC105 26 = C109xC109 27 = C113xC113 28 = C117xC117 29 = C121xC121 30 = C125xC125 31 = C131xC131 32 = C135xC135 33 = C139xC139 34 = C143xC143 35 = C147xC147 36 = C151xC151
ec	error correction (only if format = 0) 1 = 10 % 2 = 23 % 3 = 36 % 4 = 50 %
m	mode 0 = data 1 = runes (figures 0-255) 2 = Unicode (8 Bit ASCII) 3 = GS1 (not yet available)
0	dummy
dp	datum point 1 = left top 2 = centre top 3 = right top 4 = left centre 5 = centre centre 6 = right centre 7 = left bottom (default) 8 = centre bottom 9 = right bottom

5.12 Rectangle

AM[n]y;x;p;a;h;b;s;m;dp	
A	identification for mask set
M	identification for protocol version
n	field number
y	Y position in 1/100 mm
x	X position in 1/100 mm
p	identification for phantom field 0 = print 1 = no print
a	identification for field type 10 = rectangle
h	rectangle height in 1/100 mm
b	rectangle height in 1/100 mm
s	line width in 1/100 mm
m	line type; 1 digit
dp	datum point 1 = left top 2 = centre top 3 = right top 4 = left centre 5 = centre centre 6 = right centre 7 = left bottom (default) 8 = centre bottom 9 = right bottom

5.13 Line

AM[n]y;x;p;a;d;l;s;m;dp	
A	identification for mask set
M	identification for protocol version
n	field number
y	Y position in 1/100 mm
x	X position in 1/100 mm
p	identification for phantom field 0 = printout 1 = no printout
a	identification for field type 11 = line
d	rotation 0 = horizontal 1 = vertical
l	length in 1/100 mm
s	line width in 1/100 mm
m	line type; 1 digit
dp	datum point 1 = left top 2 = centre top 3 = right top 4 = left centre 5 = centre centre 6 = right centre 7 = left bottom (default) 8 = centre bottom 9 = right bottom

5.14 Internal Graphic

AM[n]y;x;p;a;d;dy;dx;dp	
A	identification for mask set
M	identification for protocol version
n	field number
y	Y position in 1/100 mm
x	X position in 1/100 mm
p	identification for phantom field 0 = print 1 = no print
a	identification for field type 3 = internal graphic
d	rotation 0 = 0° 1 = 90° 2 = 180° 3 = 270°
dy	rotation in direction Y
dx	rotation in direction X
dp	datum point 1 = left top 2 = centre top 3 = right top 4 = left centre 5 = centre centre 6 = right centre 7 = left bottom (default) 8 = centre bottom 9 = right bottom

6 Text Set


BM[n]text	
B	identification for text set
M	identification for extended protocol
n	field number
text	data contents, text

BV[n]text	
B	identification for text set
V	identification for selection by field name
n	field name
text	data contents, text


BF[n]text	
B	identification for text set
F	identification for selection by free definable field number
n	field number
text	data contents, text

6.1 Examples

Mask set

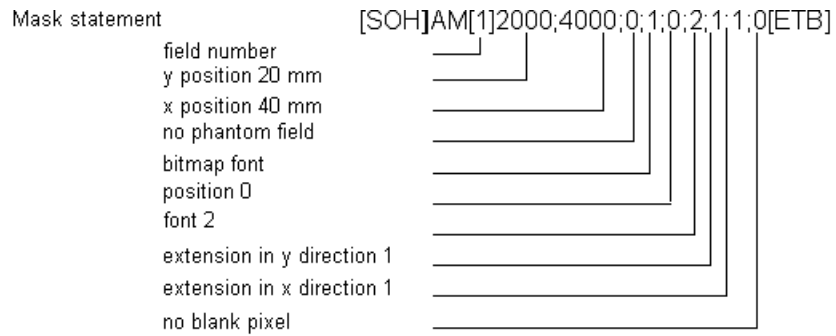

Texts set

 

Text set with variable definition:

[SOH]BM[125]=CN(0,0,3,1,1)000[ETB]

Example label

ASCII data	Identification
⊗AM[1]3600;4600;0;33;0;1500;0;4;1;1⊕ ^{C_R} ^{L_F}	mask set for bar code
⊗BM[1]444444444444⊕ ^{C_R} ^{L_F}	appropriate text set
⊗AM[2]600;4700;0;4;0;1;300;200;24⊕ ^{C_R} ^{L_F}	five mask sets vector font / proportional font
⊗AM[3]600;3100;0;4;0;1;400;300;24⊕ ^{C_R} ^{L_F}	
⊗AM[4]1100;4700;0;4;0;1;400;300;24⊕ ^{C_R} ^{L_F}	
⊗AM[5]1800;4700;0;4;0;1;300;200;24⊕ ^{C_R} ^{L_F}	
⊗AM[6]1900;3700;0;4;0;1;600;400;24⊕ ^{C_R} ^{L_F}	
⊗BM[2]Art.Nr. ⊕ ^{C_R} ^{L_F}	five appropriate text sets
⊗BM[3]44444⊕ ^{C_R} ^{L_F}	
⊗BM[4]Artikelbezeichnung⊕ ^{C_R} ^{L_F}	
⊗BM[5]EUR⊕ ^{C_R} ^{L_F}	
⊗BM[6]99,-- ⊕ ^{C_R} ^{L_F}	
⊗FBA000r06000000⊕	number of lines
⊗FBBA00r00001000⊕	number of items
⊗FBC000r00000000⊕	start

: graphic data in PCX format
 ⊗: SOH (1_{hex} bzw 5E_{hex})
 ⊕: ETB (17_{hex} bzw. 5F_{hex})
^{C_R}: CarriageReturn (0D_{hex})
^{L_F}: LineFeed (0A_{hex})

7 Graphic Set

7.1 General Graphic Format

This format is supported by all our printers but note that a 8 bit transmission is absolute necessary.

SOH	D	p	p	p	p	lb	lb	lb	b	b	b	gb.....	ETB
-----	---	---	---	---	---	----	----	----	---	---	---	---------	-----

			min.	max.
D	=	identification for graphic set		
p	=	pixel line from above	'0000'	'1900'
lb	=	1. byte from left	'000'	'100'
b	=	quantity of bytes	'1'	'100'
gb	=	graphic bytes		

Graphic byte



1 graphic bit = 0,083 x 0,083 mm

7.2 Graphic in PCX Format

It is possible to transfer graphic data as a PCX-file (e.g. PaintBrush) to the printer. With this type of data transfer the PCX-file is transferred in a compressed form. Hereby the RLE-procedure is used and therefore the graphic data were reduced by approx. 30 %. This means that the effective transferring time for 300 dpi printers is cut in halves.

To set the printer ready for receiving PCX-data the protocol has to be switched over and hereby the following command set will be defined:

SOH	A	X	n	n	n	y	y	y	y	y	x	x	x	x	x	m	dp	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	----	-----

n	Index of transferred graphic to printer internal maintenance at present not processed (000)		
y	Y coordinate of graphic in 1/100 mm		
x	X coordinate of graphic in 1/100 mm		
m	Mode 0 = standard (background is overwritten) Mode 1 = transparency (background is maintained) Mode 2 = inverse (background is overwritten) Mode 3 = inverse transparency (background is maintained)		
dp	datum point 1 = left top 2 = centre top 3 = right top 4 = left centre 5 = centre centre 6 = right centre 7 = left bottom (default) 8 = centre bottom 9 = right bottom		

- It is recommended to observe that directly after the final sign (ETB) no separator res. fill character such as $C_R L_F$ is indicated.
- The printer supports the following PCX versions: 5, 3, 2 and 0.
- It is necessary that the corresponding PCX-file is available as monochrome (black/white).
- The graphic has to be available in the original size as the printer is not able to change the size by itself.

**NOTICE!**

Before print start, indicated by parameter set 'FBC', the definition of field number, lines and pieces has to be effected via the parameter sets (FBA res. FBB).

7.3 Example PCX File

*** PCX_GRAPHIC-INFO ***-

⊗AX0010015300100941⊕#####

⊗AM[1]3600;4600;0;33;0;1500;0;4;1;1⊕ $C_R L_F$ | mask set for bar code

⊗BM[1]444444444444⊕ $C_R L_F$ | appropriate text set

⊗AM[2]600;4700;0;4;0;1;300;200;24⊕ $C_R L_F$

⊗AM[3]600;3100;0;4;0;1;400;300;24⊕ $C_R L_F$

⊗AM[4]1100;4700;0;4;0;1;400;300;24⊕ $C_R L_F$

⊗AM[5]1800;4700;0;4;0;1;300;200;24⊕ $C_R L_F$

⊗AM[6]1900;3700;0;4;0;1;600;400;24⊕ $C_R L_F$

⊗BM[2]Art.Nr. ⊕ $C_R L_F$

⊗BM[3]44444⊕ $C_R L_F$

⊗BM[4]Artikelbezeichnung⊕ $C_R L_F$

⊗BM[5]EUR⊕ $C_R L_F$

⊗BM[6]99,-- ⊕ $C_R L_F$

⊗FBA00r06000000⊕

⊗FBBA00r00001000⊕

⊗FBC000r00000000⊕

five mask set vector font / proportional font

five appropriate text sets

set number of lines (FBA...)

set quantity (FBBA..)

start print order (FBC...)

: Grafikdaten im PCX Format

⊗: SOH (1_{hex} bzw 5E_{hex})

⊕: ETB (17_{hex} bzw. 5F_{hex})

C_R : CarriageReturn (0D_{hex})

L_F : LineFeed (0A_{hex})

8 Variables

8.1 Set Structure

SOH	BM	[n]	=	v	v	(	p1	p2	p..	pn	)	t1	t2	t..	t70	ETB
-----	----	-----	---	---	---	---	----	----	-----	----	---	----	----	-----	-----	-----

= start of function
 vv variable type
 SC link field
 CN counter
 CC extended counter
 CL date/time
 CU currency variable
 SH shift variable
 MD memory card data
 (start of variable parameter block
 p1...pn variable parameter
) end of variable parameter block



NOTICE!

In case you want to print a text which corresponds exactly to the variable definition then you have to place '!' before.

SOH	BM	[n]	!	=	v	v	(	p1	p2	p..	pn	)	t1	t2	t..	t70	ETB
-----	----	-----	---	---	---	---	---	----	----	-----	----	---	----	----	-----	-----	-----

8.2 Link Field

SOH	BM	[n]	=	S	C	(	p1	;	p2	;	p..	;	pn	)	t1	t2	t..	t70	ETB
-----	----	-----	---	---	---	---	----	---	----	---	-----	---	----	---	----	----	-----	-----	-----

= SC identification of link field
 p1...pn identification of link elements (field number or constant text)
 field number is entered without leading '0'
 constant text is included in " but these marks are not printed



NOTICE!

Reference fields can be constant text or variables but no link fields.

Example

=SC(1;2;3) --> Printout: Field1Field2Field3

=SC(1;"constant";2) --> Printout: Field1constantField2

8.3 Counter

SOH	BM	[n]	=	C	N	(	t	;	m	;	c	;	+/-	s	;	i	;	h	;	r	)	t1	t2	t..	t70	ETB
-----	----	-----	---	---	---	---	---	---	---	---	---	---	-----	---	---	---	---	---	---	---	---	----	----	-----	-----	-----

= CN	identification counter
t	type of counter
0	numerical
1	letters only
2...36	radix, base of the counter
m	function mode
0	standard
1	return to start value
2	enter the start value at the beginning of printing (default = existing start value)
3	enter the start value at the beginning of printing (default = last final number)
4	reset start value at cycle end (only for DPM IIIi)
5	reset start value by I/O signal
6	time-controlled resetting
7	time-controlled resetting with input of initial value (default = last final value)
c	digit where the numbering starts counting
+/-	direction
+	adding
-	subtracting
s	step width
i	update interval (number of labels with identical number)
h	time by which the counter is reset (function mode 6 and 7) in format 'HH:MM' e.g. 00:00 = reset counter at 0:00 (optional, only for function mode 6 and 7)
r	reset value (optional, only for function mode 6 and 7; default = text and/or initial value)
Limitation: The time-controlled resetting of counter variable is only effected in case of an active print order. If a print order is cancelled before the specified time and afterwards again restarted then no resetting of counter value is effected.	
t1, t2, ...	text res. start value of counter

Example:

Input: =CN(10;7;4;+1;1;06:00;0001)1234

The enquiry for the initial value is effected at print start and
at 6:00 the counter variable is reset to value 0001.

8.4 Extended Counter

SOH	BM	[n]	=	C	C	(	+/-	s	;	i	;	m	;	z	;	n	;	x	)	t	ETB
-----	----	-----	---	---	---	---	-----	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

= CC	identification of numeric counter
+/-	direction
+	counter adding
-	counter subtracting
s	step width
i	update interval (number of labels with identical number)
m	function mode
0	standard
1	return to start value
2	enter the start value at the beginning of printing (default = existing start value)
3	enter the start value at the beginning of printing (default = last final number)
4	reset start value at cycle end (only for DPM IIIi)
5	set min. / max. value
6	set start value
7	print end
z	leading zeros
0	no leading zeros
1	printout with leading zeros
n	minimum value (max. -999999999)
x	maximum value (max. 999999999)
t	start value (the number of digits determines the format for the printout with leading zeros (max. 999999999)

Example:

Input: =CC(+1;2;5;0;1,999)0050

Printout: 50, 51,...999, 1, 2, ...

8.5 Date and Time

```
SOHBM[n]=CL(m;d;i;n;c;mo;pd;pm;md;mm;rw;ws)t1..t70ETB
```

= CL identification date/time

m month offset to the actual date
(negative value/entry possible)

d day offset to the actual date

i update interval
(0 = at the beginning of a print order, 1 = each label)

Optional parameters

n minute offset to the actual time
(negative entry/value possible)

c correction month overflow
(0 = change to the next month, 1 = remain in current month)

Optional parameters for BBE date

mo input mode
0: standard; display current date of real time clock
1: display calculated date, modification possible
2: display calculated date, no modification possible

pd max. positive correction days

pm max. positive correction months

md max. negative correction days

mm max. negative correction months

Optional parameters for rounded date

rw rounded weekday: 1 = Sunday ... 7 = Saturday; 0 = no rounding

ws start of week, format: "D-HH:MM",
e.g. 1-00:00 = Sunday, 0:00 Uhr

Example

Actual date as per Real Time Clock: 08.12.

Input: =CL(0;0;0)<DD.MO.> Printout: 08.12.

Input: =CL(2;1;0)<DD.MO.> Printout: 09.02.

Example for BBE date

Input: =CL(0;0;0;0;0;1;3;2;3;2)<DD.MO.>

At print start the calculated date is displayed at the printer and can be modified (+/- 3 days and +/- 2 months):

Display: ID_1 DD:MO:YY
08.12.11

Example for rounded date

The beginning of the week is on Sunday (08.12.) at 00:00. The date of Monday should be printed the whole week.

Input: =CL(0;0;0;0;0;0;0;0;0;2;1-00:00)<DD.MO.>

Current date	Rounded date
07.12. 23:59:59	02.12.
08.12. 00:00:00	09.12.
09.12.	09.12.
14.12. 23:59:59	09.12.
15.12. 00:00:00	16.12.

8.6 Format Identifier (Date & Time)

Standard format	
HH	Hours 2-digit (24 hours)
HE	Hours 2-digit (12 hours)
MI	Minutes 2-digit
SS	Seconds 2-digit
AM	AM/PM output
DD	Day 2-digit
MO	Month 2-digit
YYYY	Year 4-digit
YY	Year 2-digit
Y	Year 1-digit
WW	Calendar week
DW	Day of week (Sunday = 0)
DW1	Day of week (Sunday = 1)
DwX	Day of week An arbitrary ASCII character can be used for x, from which it is counted consecutively
DOWxxxxxxx	Day of week - variable For x, any ASCII character can be used The first 'x' denominates Sunday, the next denominates Monday and so on until Saturday For each weekday a character must be created
DOY	Day of year 3-digit (First January = 1)
DY	Day of year 3-digit (First January = 0)
Examples	
DD.MO.YY	22.01.10
MO/DD/YYYY	01/22/2010
YY-MO-DD	10-01-22
YYMODD	100122

The format identifier 'HE' and 'AM'/'am'/'Am' are supplemented. Therefore the output of hours in 12-hours mode is possible. By the additional output of format identifier 'AM' the output of time in american/english format is possible.

Example

```
=CL(0;0;0;0)<HH:MI:SS>      --> 15:30:00
=CL(0;0;0;0)<HE:MI:SS>      --> 03:30:00
=CL(0;0;0;0)<HE:MI:SS AM>   --> 03:30:00 PM
=CL(0;0;0;0)<HE:MI:SS am>   --> 03:30:00 pm
=CL(0;0;0;0)<HE:MI:SS Am>   --> 03:30:00 p.m.
```

By separating the output of time and AM/PM output in 2 text fields, also the following output format is possible:
--> 03:30:00 pm

Extended format	
XMO	Name of month short
XSO	Name of month long
XSD	Weekday short
XLD	Weekday long
For X you can enter the country identification of desired language	
C = Canadian D = Danish E = English F = French G = German I = Italian N = Dutch O = Norwegian S = Spanish U = Finnish W = Swedish	
Examples:	
DD.EMO.YY	22.JAN.10
DD.ESO YYYY	22. January 2010
ELD,DD.GMO.YY	Friday, 22. JAN.10
ESD,DD.MO.YY	FR, 22.01.10

Extended format - XMO

C	JA	FE	MR	AL	MA	JN	JL	AU	SE	OC	NO	DE
D	JAN	FEB	MAR	APR	MAJ	JUN	JUL	AUG	SEP	OKT	NOV	DEC
E	JAN	FEB	MAR	APR	MAY	JUN	JUL	AUG	SEP	OCT	NOV	DEC
F	JAN	FEV	MAR	AVR	MAI	JUIN	JUIL	AOU	SEP	OCT	NOV	DEC
G	JAN	FEB	MRZ	APR	MAI	JUN	JUL	AUG	SEP	OKT	NOV	DEZ
I	GEN	FEB	MAR	APR	MAG	GIU	LUG	AGO	SET	OTT	NOV	DIC
N	JAN	FEB	MRT	APR	MEI	JUN	JUL	AUG	SEP	OKT	NOV	DEC
O	JAN	FEB	MAR	APR	MAI	JUN	JUL	AUG	SEP	OKT	NOV	DES
S	ENE	FEB	MAR	ABR	MAY	JUN	JUL	AGO	SEP	OCT	NOV	DIC
U	TAM	HEL	MAA	HUH	TOU	KES	HEI	ELO	SYU	LOK	MAR	JOU
W	JAN	FEB	MAR	APR	MAJ	JUN	JUL	AUG	SEP	OKT	NOV	DEC

Extended format - XSO

C	January	February	March	April	May	June
D	Januar	Februar	Marts	April	Maj	Juni
E	January	February	March	April	May	June
F	Janvier	Février	Mars	Avril	Mai	Juin
G	Januar	Februar	Maerz	April	Mai	Juni
I	Gennaio	Febbraio	Marzo	Aprile	Maggio	Giugno
N	Januari	Februari	Maart	April	Mei	Juni
O	Januar	Februar	Mars	April	Mai	Juni
S	Enero	Febrero	Marzo	Abril	Mayo	Junio
U	Tammikuu	Helmikuu	Maaliskuu	Huhtikuu	Toukokuu	Kesaekuu
W	Januari	Februari	Mars	April	Maj	Juni

C	July	August	September	October	November	December
D	Juli	August	September	Oktober	November	December
E	July	August	September	October	November	December
F	Juillet	Août	Septembre	Octobre	Novembre	Décembre
G	Juli	August	September	Oktober	November	Dezember
I	Luglio	Agosto	Settembre	Ottobre	Novembre	Dicembre
N	Juli	Augustus	September	Oktober	November	December
O	Juli	August	September	Oktober	November	Desember
S	Julio	Agosto	Septiembre	Octubre	Noviembre	Diciembre
U	Heinaekuu	Elokuu	Syyskuu	Lokakuu	Marraksuu	Joulukuu
W	Juli	Augusti	September	Oktober	November	December

Extended format - XSD

C	SUN	MON	TUE	WED	THU	FRI	SAT
D	SO	MA	TI	ON	TO	FR	LO
E	SUN	MON	TUE	WED	THU	FRI	SAT
F	DIM	LUN	MAR	MER	JEU	VEN	SAM
G	SO	MO	DI	MI	DO	FR	SA
I	DOM	LUN	MAR	MER	GIO	VEN	SAB
N	ZO	MA	DI	WO	DO	VR	ZA
O	SO	MA	TI	ON	TO	FR	LO
S	DOM	LUN	MAR	MIE	JUE	VIE	SAB
U	SU	MA	TI	KE	TO	PE	LA
W	SO	LA	TI	ON	TO	FR	LO

Extended format - XLD

C	Sunday	Monday	Tuesday	Wednesday	Thursday	Friday	Saturday
D	Søndag	Mandag	Tirsdag	Onsdag	Torsdag	Fredag	Lørdag
E	Sunday	Monday	Tuesday	Wednesday	Thursday	Friday	Saturday
F	Dimanche	Lundi	Mardi	Mercredi	Jeudi	Vendredi	Samedi
G	Sonntag	Montag	Dienstag	Mittwoch	Donnerstag	Freitag	Samstag
I	Domenica	Lunedì	Martedì	Mercoledì	Giovedì	Venerdì	Sabato
N	Zondag	Maandag	Dinsdag	Woensdag	Donderdag	Vrijdag	Zaterdag
O	Søndag	Mandag	Tirsdag	Onsdag	Torsdag	Fredag	Lørdag
S	Domingo	Lunes	Martes	Miércoles	Jueves	Viernes	Sábado
U	Sunnuntai	Maanantai	Tiistai	Keski-viikko	Torstai	Perjantai	Lauantai
W	Söndag	Måndag	Tisdag	Onsdag	Torsdag	Fredag	Lördag

8.7 Currency Variable

SOH	BM	[n]	=	C	U	(	a	;	b	;	c	;	d	;	e	;	f	;	g	)	t1	t2	t..	t70	ETB
-----	----	-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	----	----	-----	-----	-----

= CU Signification of variable Euro

a ANSI-Code of thousand separator as decimal figure

b ANSI-Code of comma separator as decimal figure

c Quantity of numbers after the comma as decimal figure

d Operand A Before the processing the variable Euro

e Operand B calculates the term

f Operand C $\frac{A \times B}{C}$

g Rounding format

t1, t2, ... Format string, is indicated by "< >"

Example:

In case the contents of field 20 has to be converted from USD into EUR the definition of variable for the user defined format is as follows:

B01 '=CU(46;44;2;20;"1,0";"0,68861";"0,01")Result: <>Euro'

B20 1.250,44 USD

Printout: 1.250,44 USD

 Result: 1.815,89 Euro*

* 1 USD = 0,68861 Euro (11.01.2010)

8.8 Shift Variable

SOH	BM	[n]	=	S	H	(	)	t1	t2	t..	t70	ETB
-----	----	-----	---	---	---	---	---	----	----	-----	-----	-----

= SH identification of shift variable



NOTICE!

The shift variable did not need any parameters. The settings for the output are defined with the corresponding parameter sets. (see above)

Beispiel

The shift times are defined: 00:00 - 11:59 "Shift1"
12:00 - 23:59 "Shift2"

```
=SH()    Printout at 10:00 Uhr:    "Shift1"
=SH()    Printout at 13:00 Uhr:    "Shift2"
```

Set shift times

S	O	H	F	C	I	D	-	-	r	N	N	H	H	M	M	h	h	m	m	E	T	B
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

NN = ID [01 ... 24]

HH = start hour

MM = start minute

hh = end hour

mm = end minute

Get shift variable

[illegible]

Answer

[illegible]

Set shift text

[illegible]

NN = ID [01 ... 24]

T = max. 10 characters

Get shift variable

[illegible]

Answer

[illegible]

8.9 User Guiding

SOH	BM	[n]	=	U	G	(	c	;	t	;	m	;	ap	;	ae	;	sp	)	t1	t2	t..	t70	ETB
-----	----	-----	---	---	---	---	---	---	---	---	---	---	----	---	----	---	----	---	----	----	-----	-----	-----

= UG identification user guiding

c start position for the entry

t type of entry
 0 numerical
 1 alphanumeric

m mode of entry
 0 do not jump over special characters
 1 jump over special characters

ap alignment at printing
 0 aligned to the right side

ae alignment at entry
 0 aligned to the right side

sp prompt text for the variable, max. 24 characters
 The entry has to be included in ".

Example

Entry: =UG(1;0;0;0;0;"Enter article no.")<123456>
 Display: Enter article no.
 123456

8.10 User Guiding with Mask

SOH	BM	[n]	=	U	M	(	c	;	t	;	m	;	ap	;	ae	;	sp	;	d	;	ma	)	t1	t2	t..	t70	ETB
-----	----	-----	---	---	---	---	---	---	---	---	---	---	----	---	----	---	----	---	---	---	----	---	----	----	-----	-----	-----

- = UM identification user guiding with mask
- c start position for the entry
- t type of entry (is ignored with existing mask definition)
 - 0 numerical
 - 1 alphanumerical
- m mode of entry (is ignored with existing mask definition)
 - 0 do not jump over special characters
 - 1 jump over special characters
- ap alignment at printing
 - 0 aligned to the right side
- ae alignment at entry
(always left aligned with existing mask definition)
 - 0 right aligned
 - 1 left aligned, cursor at the beginning of the text
 - 2 left aligned, cursor at the start position
 - 3 right aligned, remove fill characters
 - 4 left aligned, cursor at the beginning of the text, remove fill characters
 - 5 left aligned, cursor at the start position, remove fill characters
- sp prompt text for the variable, max. 24 characters
The entry has to be included in ".
- d deleting setpoint value
 - 0 setpoint value remains at key entry (inserting mode)
 - 1 with first key press the setpoint value disappears
 - 2 setpoint value is retained (overwrite mode)
- ma definition of mask
possible mask characters are
 - 9 numbers only
 - # only numbers and leading signs
 - ? letters only
 - a alphanumeric characters (letters and numbers)
 - C any characters

Example

Entry: =UM (1;0;0;0;0;"Enter article no.";0;"999-aa")<123-xx>
 Display: Enter article no.
 123-xx

8.11 Memory Card Data

```
SOHBM[n]=MD(FN="filename";SE='x';CH=x;SC="x";SF="x";RC="x")ETB
```

= MD	identification of memory card data
FN	file name of table onto memory card with CSV data
SE	Separator sign (default = ';')
CH	column name in the first line (0 = no, 1 = yes)
SC	name and/or number of column that should be referenced
SF	field name and/or field index of field onto the label, which contains the searched data
RC	name and/or number of column, which contains the data to be printed




NOTICE!

If in parameter SF a field name is indicated, this must have been defined for the appropriate field by an AC attribute statement!

Example

```
AC[1]NAME="FCODE"
BM[2]=MD(FN="a:\daten.csv";SE=';';CH=1;SC="Farbcode";SF="FCODE";
RC="IC-Nummer")
```

Field 1	Output Field 2
00001	121478242
23252	784587448

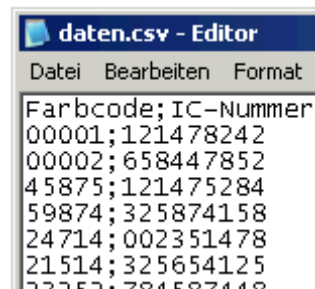

8.12 GS1-128 Parser



NOTICE!

By means of this variable type, the content of an application identifier in a GS1-128 bar code can be determined.

```
SOHBM[n]=AI(p;Ai)ETB
```

= AI	identification of GS1-128 parser
p	identification of the link element (field number)
Ai	application identifier

Example

```
Field 1 ="00123456789012345675"    GS1-128 with AI00
=AI(1;"00")                        Printout: 123456789012345675
```


8.13 EPC Calculation (Electronic Product Code)*

SOH	BM	[n]	=	E	P	C	(	M	;	L	;	F	;	P	;	N1	;	{N2}	)	ETB
-----	----	-----	---	---	---	---	---	---	---	---	---	---	---	---	---	----	---	------	---	-----

= EPC identification of EPC calculation
M coding method
L length of manufacturer number (company prefix)
F filter value
P verification of check digit
N1 identification of link element (field number)
N2 identification of link element (field number) - optional

For more information, visit the following web sites:

www.epcglobalinc.org or www.gs1.org

Param.	Value range		
M	0 = coding method SSCC96		3 = coding method GRAI96
	1 = coding method SGTIN96		4 = coding method GIAI96
	2 = coding method SGLN96		
L	6...12		
F	Coding	Filter value	Binary
	SSCC96	All Others	000
		Undefined	001
		Logistical / Shipping Unit	010
	SGTIN96	All Others	000
		Retail Consumer Trade Item	001
		Standard Trade Item Grouping	010
		Single Shipping/ Consumer Trade Item	011
	SGLN	All Others	000
		Physical Location	001
	GRAI	All Others	000
	GIAI	All Others	000
P	0 = no verification; 1 = verification		
N1, N2	any		

Example 1

Field 1 ="00123456789012345675" GS1-128 with AI00
Field 2 =AI(1;"00") --> Printout: 123456789012345675
Field 3 =EPC(0;12;0;1;2) --> Printout: 3100DA7557D32C38E7000000
The EPC is calculated with the content of Field 2. The coding method SSCC96 is used. In Field 2 a valid NVE must be represented (18-digit, correct check digit).

Example 2

Field 1 ="4141234567890128254123" GS1-128 with AI00, AI254
Field 2 =AI(1;"414") --> Printout: 1234567890128
Field 3 =AI(1;"254") --> Printout: 123
Field 4 =EPC(2;10;0;0;2;3) --> Printout: 3208499602D218000000007B
The EPC is calculated with the content of Field 2 and Field 3. The coding method SGLN96 is used. In Field 2 a valid ILN must be represented (13-digit). In the example, Field 3 contains an optional serial number. No verification of check digit of ILN (8) is effected.

* only when using option RFID

8.14 Check Digit

SOH	BM	[n]	=	C	D	(	d	;	s	;	l	;	t	;	w	;	m	;	r	;	o	)	t1	t..	t70	ETB
-----	----	-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	----	-----	-----	-----

= CD Identification of check digit

d Data for check digit calculation (field number of constant text)
Constant text is enclosed in "".

s Start position within data

1 ...n Start calculation at digit x

l Number of digits. If the parameter is not indicated, the remaining data (from start position) is used for the check digit calculation.

t Check digit type

0 Modulo 10 (weighting 3)

1 Modulo 11

2 Modulo 43

3 Modulo 47 (weighting 15)

4 Modulo 47 (weighting 20)

5 Modulo 103

6 Customized

Optional parameters for customized check digit

w Weighting.

Constant text enclosed in "" - contains the individual weighting values or an interval.

Individual values: "x₁,x₂"

Interval: "x₁...x₂"

m Modulo

r Add result to

o Print only one digit

0 No

1 Yes

Example

Entry: =CD("123456789012";0;0;0)

Printout: 8

Entry: =CD("1234567890";0;0;6;"1,3";10;10;1)

Printout: 5

8.15 Substring

SOH	BM	[n]	=	S	S	(	d	;	s	;	l	)	ETB
-----	----	-----	---	---	---	---	---	---	---	---	---	---	-----

= SS Identification of substring

d Data used for substring extraction (field number or field name or constant text.
Constant text is enclosed in "".

s Start position within data. If this parameter is omitted, the substring extraction starts with the 1st character of the data string.
1 n Start at digit x

l Number of digits. If this parameter is omitted, all characters from the start position to the end of the data string are returned.
1 ...n At the start position x digits

Example:

Entry: =SS("1234567890";4;3)

Printout: 456

Field "ARTIKELNR" has the contents "370012330295"

Entry: =SS(ARTIKELNR;1;4)

Printout: 3700

9 Parameter Sets

9.1 Label Parameters

Set label photocell type

SOH	F	C	D	E	-	-	r	N	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0 = transmission photocell normal

N: 1 = reflection photocell

N: 2 = transmission photocell inverse

N: 3 = reflection photocell inverse

N: 4 = Ultrasonic photocell (option for 103/12, 104/12, 106/12, 106/24, 108/12, 162/12)

Get label photocell type

SOH	F	C	D	E	-	-	w	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set label type

SOH	F	C	D	A	-	-	r	N	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0 = change to adhesive labels (automatically measure process)

N: 1 = change to continuous labels

Get label type

SOH	F	C	D	A	-	-	w	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Measure label

In case of loading a new label roll it is possible to start measuring by this command.

SOH	F	C	B	-	-	-	r	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

The current label and gap length in the printer can be sent to the Host computer:

SOH	F	C	B	-	-	-	w	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

After this command the printer sends the following answer:

Answer

SOH	A	E	E	E	E	S	S	S	S	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

EEEE = label length in mm (ASCII)

SSSS = gap length in mm (ASCII)

Set label length in 1/100 mm

SOH	F	C	C	L	-	-	r	N	N	N	N	N	N	N	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N = value of label length in 1/100 mm, 7 digit ASCII number

Get label length in 1/100 mm

SOH	F	C	C	L	-	-	w	N	N	N	N	N	N	N	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	N	N	N	N	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set gap length in 1/100 mm

SOH	F	C	C	M	-	-	r	M	M	M	M	M	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

M = value of gap length in 1/100 mm, 5 digit ASCII number

Get gap length in 1/100 mm

SOH	F	C	C	M	-	-	w	M	M	M	M	M	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	M	M	M	M	M	M	-	-	-	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set label width in 1/100 mm

SOH	F	C	C	O	-	-	r	N	N	N	N	N	N	N	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N = indication of label width in 1/100 mm, 7 digit ASCII number

Get label width in 1/100 mm

SOH	F	C	C	O	-	-	w	P	P	P	P	P	P	P	P	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	N	N	N	N	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set label error length in mm

SOH	F	C	D	G	A	-	r	N	N	N	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNN = indication of label error length in mm (1 ... 999)

Get label error length

SOH	F	C	D	G	A	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set label synchronization

SOH	F	C	D	G	B	-	r	N	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0 = Off

N: 1 = On

Get label synchronization

SOH	F	C	D	G	B	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set number of columns

SOH	F	C	C	H	A	-	r	N	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N = number of columns (1...9)

Get number of columns

SOH	F	C	C	H	A	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set column width

SOH	F	C	C	H	B	-	r	N	N	N	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNN = indication of column width in 1/10 mm (0 ... 999)

Get column width

SOH	F	C	C	H	B	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set label alignment

SOH	F	C	C	J	-	-	r	N	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0 = left

N: 1 = centre

N: 2 = right

Get label alignment

SOH	F	C	C	J	-	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set contrast

SOH	F	C	A	B	-	-	r	N	N	N	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNN: indication of contrast in % (010 ... 200)
 necessary to transmit a 3 digit ASCII number.

Get contrast

SOH	F	C	A	B	-	-	w	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	-	-	-	-	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set flip label

SOH	F	C	D	O	-	-	r	N	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0 = flip label Off

N: 1 = flip label On

Get flip label

SOH	F	C	D	O	-	-	w	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	-	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set rotate label

SOH	F	C	D	N	-	-	r	X	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

X: 0 = rotate label Off

X: 1 = rotate label On

Get rotate label

SOH	F	C	D	N	-	-	w	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	X	-	-	-	-	-	-	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set mode flip/rotate label

SOH	F	C	D	S	-	-	r	N	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0 = flip/rotate label at the centre point of label

N: 1 = flip/rotate label at the centre point of printhead

Get mode flip/rotate label

SOH	F	C	D	S	-	-	w	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	-	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set material selection

SOH	F	C	D	N	C	-	r	N	N	N	N	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNNN: indication of material

0 = type 1

1 = type 2

Get material selection

SOH	F	C	D	N	C	-	w	p	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	N	-	-	-	-	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set rotate label in 90 degrees

SOH	F	C	D	N	D	-	r	N	-	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0 = 0°

N: 1 = 90°

N: 2 = 180°

N: 3 = 270°

Get rotate label in 90 degrees

SOH	F	C	D	N	D	-	w	p	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	-	p	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set scan position

SOH	F	C	D	E	A	-	r	N	N	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NN = indication of scan position in % of the set label length (01 ... 99)
value depends on the label length

Get scan position

SOH	F	C	D	E	A	-	w	p	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set sensitivity of transmission photocell

SOH	F	C	D	E	B	-	r	N	N	N	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNN = indication of photocell sensitivity
3 digit ASCII number (001 ... 255)

Get sensitivity of transmission photocell

SOH	F	C	D	E	B	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set sensitivity of reflexion photocell

SOH	F	C	D	E	C	-	r	N	N	N	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNN = indication of photocell sensitivity
NNN = 3 digit ASCII number (001 ... 255)

Get sensitivity of reflexion photocell

SOH	F	C	D	E	C	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

9.2 Photocell

**Get minimal measured level at label photocell
(label parameter A)**

SOH	F	C	M	A	A	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNN = value of measured level, 3 digit ASCII number in 1/100 V

**Get maximal measured level at label photocell
(label parameter B)**

SOH	F	C	M	A	B	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNN = value of measured level, 3 digit ASCII number in 1/100 V

Set switching threshold at label photocell (label parameter C)

SOH	F	C	M	A	C	-	r	N	N	N	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNN = value of switching threshold, 3 digit ASCII number in 1/100 V
value is automatically calculated at measuring process at
printer ($\min + \frac{\max - \min}{3}$)

Get switching threshold

SOH	F	C	M	A	C	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNN = value at measured switching threshold
3 digit ASCII number in 1/100 V

Get current value at transfer ribbon photocell

SOH	F	C	M	B	A	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0 = transfer ribbon inserted

N: 1 = no transfer ribbon

Get current value at label photocell

SOH	F	C	M	B	B	-	w	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	-	-	-	-	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNN: value at label photocell, 3 digit ASCII number in 1/100 V

Get condition of printhead photocell

SOH	F	C	M	B	C	-	w	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0 = printhead up (open)

N: 1 = printhead down (closed)

Get status at dispenser photocell

SOH	F	C	M	B	E	A	w	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0 = no label at photocell

N: 1 = label at photocell

Set switching threshold of dispenser photocell is taken into consideration.

9.3 Printer Parameters

Set print speed

SOH	F	C	A	A	-	-	r	N	N	N	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNN: Indication of print speed in mm/s

Spectra II 103/8 = 50 ... 350

Spectra II 104/8 = 50 ... 350

Spectra II 106/12 = 50 ... 350

Spectra II 106/24 = 50 ... 100

Spectra II 107/12 = 50 ... 350

Spectra II 108/12 = 50 ... 350

Spectra II 160/12 = 50 ... 300

Spectra II 162/12 = 50 ... 300

Spectra II 216/12 = 50 ... 200

It is necessary to transmit a 3 digit ASCII number

Get print speed

SOH	F	C	A	A	-	-	w	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	-	-	-	-	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set transfer ribbon control On/Off

SOH	F	C	D	B	-	-	r	N	M	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 1 = transfer ribbon control On

N: 0 = transfer ribbon control Off

M: 0 = weak sensibility

M: 1 = strong sensibility

Get transfer ribbon control On/Off

SOH	F	C	D	B	-	-	w	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	M	-	-	-	-	-	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set ribbon saving On/Off

SOH	F	C	D	J	-	-	r	N	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0 = Off

N: 1 = On

Get ribbon saving On/Off

SOH	F	C	D	J	-	-	w	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	-	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set field handling

SOH	F	C	D	K	-	-	r	N	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0 = field handling Off

N: 1 = graphic received

N: 2 = delete graphic

N: 3 = restore graphic

Get field handling

SOH	F	C	D	K	-	-	w	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set printer language

SOH	F	C	D	I	-	-	r	N	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0 = German

N: 8 = Italian

N: 15 = not used

N: 1 = English

N: 9 = Danish

N: 16 = Ukrainian

N: 2 = French

N: 10 = Polish

N: 17 = Turkish

N: 3 = Spanish

N: 11 = Greek

N: 18 = Swedish

N: 4 = Finish

N: 12 = Hungarian

N: 19 = Norwegian

N: 5 = Czech

N: 13 = Russian

N: 20 = Estonian

N: 6 = Portuguese

N: 14 = Chinese

N: 21 = Romanian

N: 7 = Netherlands

Get printer language

SOH	F	C	D	I	-	-	w	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set external printer parameters

SOH	F	C	C	P	-	-	r	N	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0 = only parameter settings by interface for label length, gap length and label width are taken into consideration.

N: 1 = parameter settings by interface are processed

N: 2 = parameter settings by interface are not taken into consideration

Get external printer parameters

SOH	F	C	C	P	-	-	w	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set Codepage

SOH	F	C	C	N	-	-	r	N	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0 = Codepage 1252 West European (former ANSI)

N: 1 = Codepage 437 English

N: 2 = Codepage 850 Western European

N: 3 - 8 = not used

N: 9 = Codepage 852 Slavic

N: 10 = Codepage 857 Turkish

N: 11 = Codepage 1250 Central and East European

N: 12 = Codepage 1251 Cyrillic

N: 13 = Codepage 1253 Greek

N: 14 = Codepage 1254 Turkish

N: 15 = Codepage 1257 Baltic

N: 16 = WGL4 (UTF-8 coded data transmission)

Please find the tables referring to the above mentioned character sets on www.carl-valentin.de/Downloads.

Get Codepage

SOH	F	C	C	N	-	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set customized entry

SOH	F	C	D	U	-	-	r	N	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0 = Off No question appears at the display. In this case the stored default value is printed.

N: 1 = On The question referring the customized variable appears once before the print start at the display.

N: 2 = Auto The question referring the customized variable appears again after print end. Additionally a query appears demanding the number of copies that should be print.

N: 3 = Auto without quantity:
The question referring the customized variable appears again after print end. However, the same number of copies is printed.
This number was defined once at the start of the print order.

Get customized entry

SOH	F	C	D	U	-	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set keyboard layout

SOH	F	C	C	K	-	-	r	N	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0 = German

N: 1 = English

N: 2 = French

N: 3 = Greek

N: 4 = Spanish

N: 5 = Swedish

N: 6 = US American

N: 7 = Russian

Get keyboard layout

SOH	F	C	C	K	-	-	w	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set sound level of key click (buzzer)

SOH	F	C	C	B	-	-	w	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0 = buzzer Off

N: 1-7 = sound level of key click

Get sound level of key click (buzzer)

SOH	F	C	C	B	-	-	w	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set hotstart On/Off

SOH	F	C	D	W	-	-	r	N	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0 = Off

N: 1 = On

Get hotstart On/Off

SOH	F	C	D	W	-	-	w	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set autoload

SOH	F	C	D	X	-	-	r	N	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0 = Off

N: 1 = On

Get autoload

SOH	F	C	D	X	-	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set standard label On/Off

SOH	F	C	M	K	E	-	r	N	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0 = Off (default) - print start without label definition signalizes error

N: 1 = On - standard label is printed without label definition

Get standard label On/Off

SOH	F	C	M	K	E	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set backfeed operating mode

SOH	F	C	M	R	A	-	r	N	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0 = standard

N: 1 = automatic

N: 2 = no backfeed

N: 3 = optimized

Get backfeed operating mode

SOH	F	C	M	R	A	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	p	p	P	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set backfeed delay

SOH	F	C	M	R	B	-	r	N	N	N	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNN: indication of delay time, 3 digit ASCII number in 1/100s

Get backfeed delay

SOH	F	C	M	R	B	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set label change confirmation

SOH	F	C	S	D	F	C	r	N	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0 = Off

N: 1 = On

Get label change confirmation

SOH	F	C	S	D	F	C	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set label synchronization at switching on

SOH	F	C	C	A	-	-	r	N	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0 = Off

N: 1 = Measure

N: 2 = Label feed

Get synchronization at switching on

SOH	F	C	C	A	-	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set CMI length

SOH	F	C	D	J	C	-	r	N	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNN: value that the labels are retracted at a stop
3 digit ASCII number in 1/100 mm (000 ... 100)

Get CMI length

SOH	F	C	D	J	C	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

9.4 Interface

By means of the following commands the parameters of the serial interface can be set. Note that after sending one of the commands also the host computer changes the corresponding parameter of its interface to allow further communication of host computer-printer. For all interface commands the interface is fixed with x. The following values are allowed:

$x = 1 \Rightarrow \text{COM } 1$

$x = 2 \Rightarrow \text{COM } 2$

In all other cases automatically the first serial interface is addressed. In the answers the addressed interface is also returned.

Set all interface parameters

SOH	F	C	F	F	x	-	r	m	;	b	;	p	;	d	;	s	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

m = mode (0 = Off, 1 = On, 2 = On, without error message)

b = baud rate (2400, 4800, 9600, 19200, 38400, 115200)

p = parity (n = no parity, e = even parity, o = odd parity)

d = number of data bits (7, 8)

s = number of stop bits (1, 2)

Get all interface parameters

SOH	F	C	F	F	x	-	w	p	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	x	;	m	;	b	;	p	;	d	;	s	;	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Example: activate interface COM1 and set 9600 Baud, no parity, 8 data bits, 2 stop bits

[SOH]FCFF1-r1;9600;n;8;2[ETB]

Interface protocol

There are two different interface protocols available. Usually SOH = 01_{Hex} and

ETB = 17_{Hex}. However there are host computers (e.g. AS/400), which cannot work with these characters. Therefore you can switch SOH = 5E_{Hex} and ETB = 5F_{Hex}. The host computer has to change the corresponding parameter as well.

Set SOH and ETB

SOH	F	C	G	C	-	-	r	N	-	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0 = SOH = 01_{Hex}, ETB = 17_{Hex}

N: 1 = SOH = 5E_{Hex}, ETB = 5F_{Hex}

Get SOH and ETB

SOH	F	C	G	C	-	-	W	p	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	p	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0 = SOH = 01_{Hex}, ETB = 17_{Hex}

N: 1 = SOH = 5E_{Hex}, ETB = 5F_{Hex}

N: 2 = other character combination

Data memory

Set data memory

SOH	F	C	G	D	-	-	r	M	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

M: 0 = Off, after receiving FBCA0r or FBDA0r the interface is locked until the end of the print order, i.e. you cannot write more data in the receiving buffer.

M: 1 = Off, after receiving FBCA0r or FBDA0r the interface is locked until the end of the print order, i.e. you cannot write more data in the receiving buffer.

M: 2 = Extended, after starting a print order it is possible to write more data in the receiving buffer. These data is processed during the print and the next label is prepared.

Get data memory

SOH	F	C	G	D	-	-	W	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	M	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set reaction to unknown interrogative set

SOH	F	C	G	E	A	-	r	N	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N = value range between 0 and 3

Get reaction to unknown questions

SOH	F	C	G	E	A	-	w	p	p	p	p	p	P	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

9.5 Network

SOH	F	C	L	A	-	-	r	C	0	A	8	0	0	1	5	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

All network parameter sets start in the third column with a 'L'. Column 4 shows the identification for the corresponding network parameter. Column 5 can show another sub-identification.

Because of the fact that the argument size is limited to 8 characters, the IP addresses (IP address, network mask, gateway address) which consist of 32 bit are transmitted in HEX presentation.

For all data which is transmitted in HEX presentation (also the MAC address) it is allowed to use capital as well as small letters.

In contrary to the parameter settings of the other interfaces, the settings of the following sets were saved immediately onto Flash, i.e. it is not necessary to save the currently set configuration before switching off the printer so the modifications are still available after switching on.

So that the made modifications become active, also without printer Reset it is necessary to transmit a corresponding Z set which effects a Reset of the network devices.

Set IP address (e.g. 192.168.0.21)

SOH	F	C	L	A	-	-	r	C	0	A	8	0	0	1	5	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Get IP address

SOH	F	C	L	A	-	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	C	0	A	8	0	0	1	5	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set netmask (e.g. 255.255.255.0)

SOH	F	C	L	B	-	-	r	F	F	F	F	F	F	0	0	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Get netmask

SOH	F	C	L	B	-	-	w	F	F	F	F	F	F	0	0	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	F	F	F	F	F	0	0	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set Gateway address (e.g. 192.168.0.1)

SOH	F	C	L	C	-	-	r	C	0	A	8	0	0	0	1	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Get Gateway address

SOH	F	C	L	C	-	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	C	0	A	8	0	0	0	1	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set transmission mode (e.g. auto recognition)

SOH F C L D - - r 0 - - - - - ETB

0 = auto recognition

3 = 100 MBit/s half duplex

1 = 10 MBit/s half duplex

4 = 100 MBit/s full duplex

2 = 10 MBit/s full duplex

Get transmission mode

SOH F C L D - - w 0 - - - - - ETB

Answer

SOH A 0 - - - - - p p p p p p p p ETB

Set DHCP support

SOH F C L E - - r N ETB

N: 0 = Off

N: 1 = On

Get DHCP support

SOH F C L E - - w p p p p p p p p ETB

Answer

SOH A N - - - - - p p p p p p p p ETB

Assign printer name

SOH F C L F - - R N N N N N N N N N N N ETB

N = printer name can consist of max. 11 characters

N = [A...Z, a...z, 0...9, -, -]

Get printer name

SOH F C L F - - w p p p p p p p p ETB

Answer

SOH A N N N N N N N N ; p p p p p p p p ETB

Set MAC address (e.g. 00-07-4A-43-19-08)

SOH F C L M B - r 0 0 0 7 4 A - - ETB

SOH F C L M A - r 4 3 1 9 0 8 - - ETB

SOH F C L M C - r 0 0 0 7 4 A 1 9 0 8 ETB

A MAC address has a width of 48 bit and is normally indicated in hexadecimal.

With a B record it is possible to modify our identification of the MAC address. All our machines start with 00-07-4A as default. This corresponds to the Memory-Pool which the MAC address committee assigned to us to guarantee that the MAC address is world-wide manufacturer-spreading unique.

With the A record any address can be set in our pool.

With the C record any address in our pool and the identification of the MAC address can be set/changed at the same time.

Get MAC address

SOH	F	C	L	M	B	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

SOH	F	C	L	M	A	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

SOH	F	C	L	M	C	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	0	0	0	7	4	A	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

SOH	A	4	3	1	9	0	8	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

SOH	A	0	0	0	7	4	A	4	3	1	9	0	8	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NTP Server

NTP (Network Time Protocol) is a standardized Internet protocol permitting the synchronization of real-time clocks of network participants. The printer connects itself with a time server and align every 60 minutes its internal real-time clock with that of the time server in order to correct possible differences.

The address of server (IP address) can be freely configured in the printer. The communication is effected by UDP and the fixed set port 123. The service in the printer is deactivated by transmitting the server address 0.0.0.0.

The time servers work together with the coordinated world time (UTC) and therefore an additional time shift is needed compared to the reference time. For Germany it is e.g. +1 hour.

The current state of the connexion can be queried with a status set.

Set NTP Server IP

SOH	F	C	L	N	I	-	r	N	ETB
-----	---	---	---	---	---	---	---	---	-----

N = X.X.X.X (X = 0 ... 255)

Get NTP Server IP

SOH	F	C	L	N	I	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	N	N	N	N	N	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

0.0.0.0 deactivates the NTP service

Readout NTP status

SOH	F	C	L	N	S	-	w	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0 = Off

N: 1 = OK

N: 2 = Error

Set time zone (hour offset)

SOH	F	C	L	N	Z	-	r	N	ETB
-----	---	---	---	---	---	---	---	---	-----

N: -12, 12

Get time zone (hour offset)

SOH	F	C	L	N	Z	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	N	N	N	N	N	N	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Reset Network Device

SOH	F	C	L	Z	-	-	r	-----	ETB
-----	---	---	---	---	---	---	---	-------	-----

For this set is no enquiry possible. This set causes that modifications made by the transfer of the previous sets become effective.

9.6 Offset Values

Set Y offset

SOH	F	C	C	D	-	-	r	V	N	N	N	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

V = offset prefix (+ or -)

NNN = offset value, 3 digit ASCII number in 1/10 mm

Get Y offset

SOH	F	C	C	D	-	-	w	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	V	N	N	N	-	-	-	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set X offset

SOH	F	C	C	E	-	-	r	V	N	N	N	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

V = offset prefix (+ or -)

NNN = offset value, 3 digit ASCII number in 1/10 mm

Get X offset

SOH	F	C	C	E	-	-	w	p	P	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	V	N	N	N	-	-	-	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set tear-off edge (Offset 4)

SOH	F	C	C	G	-	-	r	V	N	N	N	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

V = offset prefix (always +)

NNN = offset value, 3 digit ASCII number in 1/10 mm

Get tear off offset

SOH	F	C	C	G	-	-	w	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	V	N	N	N	-	-	-	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set cutter offset

SOH	F	C	S	C	A	-	r	V	N	N	N	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

V = offset prefix (always +)

NNN = offset value, 3 digit ASCII number in 1/10 mm

Get cutter offset

SOH	F	C	S	C	A	-	w	p	P	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	V	N	N	N	-	-	-	p	p	p	p	p	p	p	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set dispenser offset

SOH	F	C	S	D	A	-	r	V	N	N	N	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

V = offset prefix (always +)

NNN = offset value, 3 digit ASCII number in 1/10 mm

Get dispenser offset

SOH	F	C	S	D	A	-	w	P	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	V	N	N	N	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

9.7 Service Functions

Set zero point adjustment (Y value)

SOH	F	C	C	R	-	-	r	V	N	N	N	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Get zero point adjustment (Y value)

SOH	F	C	C	R	-	-	w	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

V: offset prefix (+ or -)

NNN: offset value

3 digit ASCII number in 1/100 mm (-999 ... +999)

Answer

SOH	A	V	N	N	N	-	-	-	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set zero point adjustment (X value)

SOH	F	C	C	T	-	-	r	V	N	N	N	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Get zero point adjustment (X value)

SOH	F	C	C	T	-	-	w	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

V: offset prefix (+ or -)

NNN: offset value

NNN: 3 digit ASCII number in 1/100 mm (-999 ... +999)

Answer

SOH	A	V	N	N	N	-	-	-	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set Online / Offline

SOH	F	C	M	K	C	-	r	M	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

M: 0 = Offline Off

M: 1 = Offline On

Get Online / Offline

SOH	F	C	M	K	C	-	w	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	M	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

After changing by interface the display is automatically new initialized (by activated online/offline changing to online indication).

Set reprint action

SOH	F	C	M	K	D	-	r	N	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Get reprint action

SOH	F	C	M	K	D	-	w	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0 = complete reprint

N: 1 = empty reprint

Answer

SOH	A	N	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set winder output

SOH	F	C	M	P	-	-	r	N	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0 = Off

N: 1 = On

Get winder output

SOH	R	C	M	P	-	-	W	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set printhead down (closed)

SOH	F	C	M	B	C	-	w	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 1

Set printhead up (open)

SOH	F	C	M	B	D	-	w	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 1

Get status of printhead locking

SOH	F	C	M	C	A	-	w	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	p	p	p	p	P	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0 = locking open

N: 1 = locking closed

Get printhead temperature

SOH	F	C	M	C	-	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNN = value of temperature, 3 digit ASCII number in degrees

Set transfer ribbon prior warning

SOH	F	C	M	L	A	-	r	N	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0 = Off

N: 1 = On

Get transfer ribbon prior warning

SOH	F	C	M	L	A	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	p	p	p	P	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set diameter for transfer ribbon prior warning

SOH	F	C	M	L	B	-	r	N	N	N	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNN = 030 ... 090 diameter in mm

Get transfer ribbon prior warning

SOH	F	C	M	L	B	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Get current transfer ribbon diameter

SOH	F	C	M	L	C	-	w	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set mode for transfer ribbon prior warning

SOH	F	C	M	L	D	A	r	N	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0 = Warning

N: 1 = Reduced speed

N: 2 = Error

Get mode for transfer ribbon prior warning

SOH	F	C	M	L	D	A	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set reduced speed (ribbon prior warning)

SOH	F	C	M	L	D	B	r	N	N	N	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNN = $V_{\min}$... $V_{\max}$: reduced print speed
(depending on printer type)

Get reduced speed (ribbon prior warning)

SOH	F	C	M	L	D	B	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	-	-	-	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set printhead resistance

SOH	F	C	M	G	-	-	r	N	N	N	N	N	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNNNN = value of resistance in Ohm.

Get printhead resistance

SOH	F	C	M	G	-	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	N	N	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set print length correction

SOH	F	C	M	T	-	-	r	V	N	N	N	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

V: offset prefix (+ or -)

NNN: print length correction value

3 digit ASCII number in 1/10 % (-100 ... +100)

Get print length correction

SOH	F	C	M	T	-	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	V	N	N	N	-	-	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set custom logo

SOH	F	C	N	R	A	-	r	N	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0 = Off

N: 1 = On

Get custom logo

SOH	F	C	N	R	A	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Paper counter

The paper counter (kilometer value) of printer as well as of printhead can only be enquired by interface and not reset to 0.

Get paper counter of printer

SOH	F	C	H	A	-	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	N	N	N	N	N	N	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Get paper counter of printhead

SOH	F	C	H	B	-	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	N	N	N	N	N	N	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNNNNNNN = kilometer value of printer and/or printhead in meters
(e.g. '00000123' = 123 m)

9.8 Date & Time

Set date

SOH	F	C	I	A	-	-	r	D	D	M	O	Y	Y	D	W	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

DD = day of month

MO = month

YY = year

DW = day of week ('00' = Sunday)

Get date

SOH	F	C	I	A	-	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	D	D	M	O	Y	Y	D	W	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set time

SOH	F	C	I	B	-	-	r	H	H	M	I	S	S	A	M	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

HH = hours

MI = minutes

SS = seconds

AM = mode ('am' = 12 hours mode AM, 'pm' = 12 hours mode PM,

'—' = 24 hours mode)

Get time

SOH	F	C	I	B	-	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	H	H	M	I	S	S	A	M	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Automatically adjust clock for daylight saving changes

Because of the fact that there is no world-wide regulation if and when a changing of time between summer and wintertime (normal time) in the individual countries takes place, we distinguish between the following four formats for the definition for beginning and end of summertime.

F 0:	European format start of summertime = last Sunday in March end of summertime = last Sunday in October W: week (1 = first, ..., 5 = last) WD: day of week (0 = Sunday, ..., 6 = Saturday) MM: month (01 = January, ..., 12 = December)
F 1:	Fix date with indication of year DD: day MM: month (01 = January, ..., 12 = December) YY: year
F 2:	Fix date without indication of year DD: day MM: month (01 = January, ..., 12 = December)
F 3:	Week day after day in month WD: day of week (0 = Sunday, ..., 6 = Saturday) DD: after day (only the first day is taken into consideration) MM: month (01 = January, ..., 12 = December)

Set automatically adjust clock for daylight saving changes

SOH	F	C	I	G	-	-	r	N	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Get automatically adjust clock for daylight saving changes

SOH	F	C	I	G	-	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0 = Automatically adjust clock for daylight saving changes Off

N: 1 = Automatically adjust clock for daylight saving changes On

Set beginning of summertime

F 0: SOH F C I H - - r F W ; W D ; M M ; H H ; M M ETB

F 1: SOH F C I H - - r F D D ; M M ; Y Y ; H H ; M M ETB

F 2: SOH F C I H - - r F D D ; M M ; H H ; M M ETB

F 3: SOH F C I H - - r F W D ; D D ; M M ; H H ; M M ETB

Get beginning of summertime

SOH F C I H - - w p p p p p p p p ETB

Answer

SOH A F W W D M M p p p p p p p p ETB

The answer depends on each set format.

Set end of summertime

F 0: SOH F C I I - - r F W ; W D ; M M ; H H ; M M ETB

F 1: SOH F C I I - - r F D D ; M M ; Y Y ; H H ; M M ETB

F 2: SOH F C I I - - r F D D ; M M ; H H ; M M ETB

F 3: SOH F C I I - - r F W D ; D D ; M M ; H H ; M M ETB

Get end of summertime

SOH F C I I - - w p p p p p p p p ETB

Answer

SOH A F W W D M M p p p p p p p p ETB

The answer depends on each set format.

Set time shifting

SOH F C I J - - r N N N - - - - ETB

NNN = minutes

Get time shifting

SOH F C I J - - w p p p p p p p p ETB

Answer

SOH A N N N p p p p p p p p ETB

9.9 Password

Set password

SOH	F	C	K	A	-	-	r	N	N	N	N	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNNN = input of password

4 digit ASCII number in mm (0000 ... 9999)

Get password

SOH	F	C	K	A	-	-	w	p	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	N	-	-	-	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set function group

SOH	F	C	K	B	-	-	r	A	B	C	D	E	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

A: Function menu

0 = password Off

1 = password On

B: CF card

0 = password Off

1 = standard directory allowed

2 = password On

C: not assigned

D: Printer guiding

0 = password Off

1 = not assigned

2 = Password On

E: Favorites menu

0 = password Off

1 = password On

Get function group

SOH	F	C	K	B	-	-	w	p	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	a	b	c	d	e	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set password function menu

SOH	F	C	K	D	A	-	r	N	N	N	N	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNNN = input of password
4 digit ASCII number in mm (0000 ... 9999)

Get password function menu

SOH	F	C	K	D	A	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	N	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set password favorites menu

SOH	F	C	K	D	B	-	r	N	N	N	N	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNNN = input of password
4 digit ASCII number in mm (0000 ... 9999)

Enquire password favorites menu

SOH	F	C	K	D	B	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	N	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set password memory card

SOH	F	C	K	D	C	-	r	N	N	N	N	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNNN = input of password
4 digit ASCII number in mm (0000 ... 9999)

Get password memory card

SOH	F	C	K	D	C	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	N	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set password printing manually

SOH	F	C	K	D	D	-	r	N	N	N	N	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNNN = input of password
4 digit ASCII number in mm (0000 ... 9999)

Get printing manually

SOH	F	C	K	D	D	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	N	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

9.10 Compact Flash Card

Save a label onto Compact Flash card

SOH	F	M	A	O	-	-	r	P	ETB
-----	---	---	---	---	---	---	---	---	-----

- O: In case a label with the entered name exists already then the label is overwritten without an enquiry. If you enter another value as 0, an enquiry appears demanding if you want to overwrite.
- P: File name of the label which is to save. Drive and path name are optional, i.e. the file name is allowed to have more than 8 characters but is limited to 79.

Load a file from Compact Flash card

SOH	F	M	B	-	-	-	r	P	ETB
-----	---	---	---	---	---	---	---	---	-----

- P: File name of the layout which is to load. Drive and path name are optional, i.e. the file name is allowed to have more than 8 characters but is limited to 79.

Delete a layout from Compact Flash card

SOH	F	M	C	-	-	-	r	P	ETB
-----	---	---	---	---	---	---	---	---	-----

- P: File name of the layout which is to delete. Drive and path name are optional, i.e. the file name is allowed to have more than 8 characters but is limited to 79.

Format Compact Flash card

SOH	F	M	D	-	-	-	r	P	ETB
-----	---	---	---	---	---	---	---	---	-----

- P: Optional drive identification with colon (e.g. A:).
In case no drive is indicated, then the currently selected is formatted.

Readout contents of CF card

SOH	F	M	G	O	-	-	r	P	ETB
-----	---	---	---	---	---	---	---	---	-----

- O: In case O is indicated, no error messages are displayed at the printing display e.g. if no card is inserted.
- P: Optional drive identification with colon (e.g. A:).
In case no drive is indicated, then the currently selected is read out.

Answer

SOH	File name/directory name	ETB
-----	--------------------------	-----

A list of all file entries is indicated, each entry is included in (SOH) and (ETB).

Readout free memory space

SOH	F	M	H	O	-	-	w	X	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

O: In case O is indicated, no error messages are displayed at the printing display e.g. if no card is inserted.

X = Drive [A,B] (optional)

Answer

SOH	A	X	n	n	n	n	-	-	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

X = Drive [A,B]

n = Memory space in KB

Create directory

SOH	F	M	I	O	-	-	r	P	ETB
-----	---	---	---	---	---	---	---	---	-----

O: In case a label with the entered name already exists, then it is overwritten without an enquiry.

If you enter another value as O, an enquiry appears demanding if you want to overwrite.

P = Drive and path indication

Delete directory

SOH	F	M	J	-	-	-	r	P	ETB
-----	---	---	---	---	---	---	---	---	-----

P = Drive and path indication

**NOTICE!**

The current directory cannot be deleted.

Delete directory path

SOH	F	M	J	A	-	-	r	P	ETB
-----	---	---	---	---	---	---	---	---	-----

Deletes the indicated directory including all containing sub-directories and files.

Change standard directory

SOH	F	M	K	-	-	-	r	P	ETB
-----	---	---	---	---	---	---	---	---	-----

P = Drive and path indication

Readout current directory

SOH	F	M	K	-	-	-	w	ETB
-----	---	---	---	---	---	---	---	-----

Answer

SOH	A	P	ETB
-----	---	---	-----

P = Current directory

Set standard directory for file selection via I/O

SOH	F	M	K	B	-	-	r	N	ETB
-----	---	---	---	---	---	---	---	---	-----

N = directory path

Get standard directory for file selection via I/O

SOH	F	M	K	B	-	-	w	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Antwort

SOH	A	N	-	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Transfer file from printer

SOH	F	M	L	-	-	-	w	P	ETB
-----	---	---	---	---	---	---	---	---	-----

P: File name of file which is to transfer. Drive name and path name are optional, i.e. the file name is allowed to have more than 8 characters but is limited to 79.

Answer

SOH	A	F	*	S	ETB	Data
-----	---	---	---	---	-----	------

F = File name

S = File size in Byte

Data = Binary data

Enquiry if the file exists

SOH	F	M	M	-	-	-	w	P	ETB
-----	---	---	---	---	---	---	---	---	-----

P: File name of file which is to transfer. Drive name and path name are optional, i.e. the file name is allowed to have more than 8 characters but is limited to 79.

Answer

SOH	A	X	P	ETB	Daten
-----	---	---	---	-----	-------

X: 0 = File does not exist

1 = File exists

P = File name

Readout size of Compact Flash card

SOH	F	M	P	O	-	-	-	w	X	ETB
-----	---	---	---	---	---	---	---	---	---	-----

O: In case O is indicated, no error messages are displayed at the printing display e.g. if no card is inserted.

X: Drive [A,B] (optional)

Answer

SOH	A	D	n	n	n	n	-	-	-	X	ETB
-----	---	---	---	---	---	---	---	---	---	---	-----

X = Drive [A,B]

n = Memory in KB

D = enquired drive

Get drive status

SOH	F	M	S	-	-	-	w	X	ETB
-----	---	---	---	---	---	---	---	---	-----

X - Drive [A,B]

Answer

SOH	A	X	S	ETB
-----	---	---	---	-----

X = Drive [A,B]

S = Status

0: no storage medium

1: not formatted

2: ready

3: not determinable

9.11 Printing

Set number of lines (n digits)

SOH	F	B	A	A	-	-	r	N	ETB
-----	---	---	---	---	---	---	---	---	-----

N = number of lines in ASCII (1, 10, 100, ...)

Get number of lines

SOH	F	B	A	A	-	-	w	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Start/Stop Command

In addition to the actual start/stop command, the print order can also be interrupted via the parameter/remote record.

SOH	F	D	-	-	-	-	r	N	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0 = stop printing

N: 1 = continue printing

N: 2 = cancel print order if it is already stopped

Reset error

Reset error

SOH	F	C	M	H	-	-	r	N	N	N	N	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNNN = current error ID or '9999'

Get error

SOH	F	C	M	H	-	-	w	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	N	0	0	0	0	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Get error ID and error text

SOH	F	C	M	H	A	-	w	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	N	:	error text	:	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	------------	---	---	---	---	---	---	---	---	-----

Item number of print order

By means of this command the Host computer can enquire following item numbers:

Total number of current print order

SOH	F	B	B	A	-	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Number of labels which are still to print

SOH	F	B	B	B	-	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Number of already printed labels

SOH	F	B	B	C	-	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Interval in cutter mode

SOH	F	B	B	D	-	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

At the end of one of these commands the printer returns the corresponding number as ASCII value (4 res. 5 digits) in the answer set.

Answer

SOH	A	N	N	N	N	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

With this set it is also possible to transmit the item number of print order and the interval (in cutter mode) to the printer.

Item number of print order

SOH	F	B	B	A	-	-	r	N	N	N	N	N	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNNNN = 5 digits item number of order

Interval in cutter mode

SOH	F	B	B	D	-	-	r	N	N	N	N	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNNNN = interval

Start printing

SOH	F	B	C	-	-	-	r	S	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

This command starts the print order which is actually set in the printer. The current parameters such as print mode, speed, initialization etc. are used.

S = x: sorted (e.g. pages 1-5, then again 1-5 etc. are printed)
 S = 1: unsorted (page 1 is printed x times, then page 2 x times, etc.)

SOH	F	B	D	-	-	-	r	S	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Start printing (see above) but without tear off offset.

SOH	F	B	E	-	-	-	r	n	n	n	n	n	n	n	n	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

With this command the printjob identifier which appears in "printing" res. "stopped" window is assigned to a print order. If only blanks are transmitted, then the printjob identifier is deleted and the display shows "noname".

Initialization of page handling

SOH	F	B	F	-	-	-	r	ETB
-----	---	---	---	---	---	---	---	-----

Selection of current page

SOH	F	B	G	-	-	-	r	P	ETB
-----	---	---	---	---	---	---	---	---	-----

P = current page number [1... 9]

Select order of pages to be printed

SOH	F	B	H	-	-	-	r	P ₁	P ₂	P ₃	ETB
-----	---	---	---	---	---	---	---	----------------	----------------	----------------	-----

P₁; P₂;...= pages to be printed

Generation of page without print start

SOH	F	B	I	-	-	-	r	S	ETB
-----	---	---	---	---	---	---	---	---	-----

With this command the corresponding page is only generated, i.e. no print start signal is sent.

S = x: sorted (e.g. pages 1-5, then again 1-5 etc. are printed)
 S = 1: unsorted (page 1 is printed x times, then page 2 x times, etc.)

Feed**Parameter set to release a feed**

SOH	F	E	-	-	-	-	r	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Test print**Parameter set to release a test print**

SOH	F	F	-	-	-	-	r	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Status print**Parameter set to print a status print**

SOH	F	C	M	Q	-	-	r	N	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0 = printer settings

N: 1 = bar codes

N: 2 = fonts

Cancel print orders**Parameter set to cancel all active print orders**

SOH	F	G	A	-	-	-	r	N	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: - = Cancel active print orders and delete all label data

N: 1 = Cancel active print orders and receive new label data

With the execution of this command:

- possible upcoming errors are confirmed
- possible upcoming customized entries are cancelled

9.12 Emulation**Set emulation**

SOH	F	Z	-	-	-	-	r	N	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0 = CVPL (Carl Valentin Programming Language)

N: 1 = ZPL II® (Zebra Programming Language)

Get emulation

SOH	F	Z	-	-	-	-	w	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

10 Parameter Sets for Options

10.1 WLAN (Wireless Local Area Network)

Get connection status

SOH	F	C	W	C	-	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	i	p	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0 = not connected

N: 1 = connected

Set DHCP support

SOH	F	C	W	D	-	-	r	x	ETB
-----	---	---	---	---	---	---	---	---	-----

x: 0 = Off

x: 1 = On

Get DHCP support

SOH	F	C	W	D	-	-	w	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	x	i	p	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set encryption type

SOH	F	C	W	E	-	-	r	x	ETB
-----	---	---	---	---	---	---	---	---	-----

x: 0 = Off

x: 1 = WEP64

x: 2 = WEP128

x: 3 = WPA

x: 4 = WPA2

Get encryption type

SOH	F	C	W	E	-	-	w	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	x	;	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	-----

Get MAC address

SOH	F	C	W	F	-	-	w	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	;	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	-----

N: Character string

Set Gateway address

SOH	F	C	W	G	-	-	r	x	ETB
-----	---	---	---	---	---	---	---	---	-----

x: Format X.X.X.X

X: 0 ... 255

Get Gateway address

SOH	F	C	W	G	-	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	x	;	p	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set IP address

SOH	F	C	W	I	-	-	r	x	ETB
-----	---	---	---	---	---	---	---	---	-----

x: Format X.X.X.X

X: 0 ... 255

Set IP address

SOH	F	C	W	I	-	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	x	;	p	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	-----

**Example
Set IP address****Set IP address (e.g. 192.168.1.21)**

SOH	F	C	W	I	-	-	r	192	.	168	.	1	.	21	ETB
-----	---	---	---	---	---	---	---	-----	---	-----	---	---	---	----	-----

x = 192.168.1.21

Get IP address

SOH	F	C	W	I	-	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	1	9	2	.	1	6	8	.	1	.	2	1	;	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set WPA/WPA2 key

SOH	F	C	W	K	-	-	r	x	ETB
-----	---	---	---	---	---	---	---	---	-----

x = Hex string, 64 characters or ASCII, max. 63 characters

Answer

SOH	A	x	;	ETB
-----	---	---	---	-----

Set netmask

SOH	F	C	W	M	-	-	r	x	ETB
-----	---	---	---	---	---	---	---	---	-----

x: Format X.X.X.X

X: 0 ... 255

Get netmask

SOH	F	C	W	M	-	-	w	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	x	;	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	-----

Get server port

SOH	F	C	W	P	-	-	w	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	x	;	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	-----

x: Port number 1 ... 65535

Get anew configuration from WLAN module and transfer to the printer

SOH	F	C	W	R	-	-	r	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	;	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	-----

N: OK (WLAN module connected)

N: Error (WLAN module not connected)

Set SSID (Service Set Identifier)

SOH	F	C	W	S	-	-	r	x	ETB
-----	---	---	---	---	---	---	---	---	-----

x = Character string

Get SSID identification

SOH	F	C	W	S	-	-	w	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	x	;	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	-----

Set WEP64 key

SOH	F	C	W	V	-	-	r	x	ETB
-----	---	---	---	---	---	---	---	---	-----

x = Hex string, 10 characters

Set WEP128 key

SOH	F	C	W	W	-	-	r	x	ETB
-----	---	---	---	---	---	---	---	---	-----

x = Hex string, 26 characters

Save settings and restart of WLAN module

SOH	F	C	W	X	-	-	r	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	i	p	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: OK (WLAN module connected)

N: Error (WLAN module not connected)

Set high speed data connection

SOH	F	C	W	H	-	-	r	x	ETB
-----	---	---	---	---	---	---	---	---	-----

This setting is specified at the printer and if an active connection to the WLAN module exists, in the WLAN module, too. Subsequently the printer is again started.

x: 0 = Normal speed (115200 baud, no handshake)

x: 1 = High speed (921600 baud (adjustable),
RTS/CTS handshake)

Get high speed data connection

SOH	F	C	W	H	-	-	w	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	x	p	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	-----

Set high speed baud rate

SOH	F	C	W	B	-	-	r	b	ETB
-----	---	---	---	---	---	---	---	---	-----

This setting is specified at the printer and if an active connection to the WLAN module exists, in the WLAN module, too. Subsequently the printer is again started.

b = baud rate (115200, 230400, 460800, 921600)

Get high speed baud rate

SOH	F	C	W	B	-	-	w	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	b	p	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	-----

10.2 Cutter

Set cutter mode

SOH	F	C	D	D	-	-	r	N	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0 = Cutter mode Off

N: 1 = Single cut

N: 2 = Mode 1 (without cutter offset), print number of pieces with cut after each label without backfeed

N: 3 = Mode 2 (with backfeed), print number of pieces with cut after each label with backfeed

N: 4 = Interval cut with final cut, transmit interval with later

N: 5 = Interval cut without final cut, transmit interval width later

N: 6 = Final cut (cut after print end)

Get cutter mode

SOH	F	C	D	D	-	-	w	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set cutter offset

SOH	F	C	S	C	A	-	r	V	N	N	N	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

V: pre-sign of offset (always +)

NNN: offset value, 3 digit ASCII number in 1/10 mm

Get cutter offset

SOH	F	C	S	C	A	-	w	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	V	N	N	N	-	-	-	p	p	p	p	p	p	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set double cut

SOH	F	C	S	C	B	-	r	V	N	N	N	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

V: pre-sign of offset (always +)

NNN: offset value, 3 digit ASCII number in 1/10 mm

0 = no double cut

Get double cut

SOH	F	C	S	C	B	-	w	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	V	N	N	N	-	-	-	p	p	p	p	p	p	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set cut width

SOH	F	C	S	C	C	-	r	N	N	N	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNN: Width in mm to cut the label
3 digit ASCII number in 1/10 mm

Get cut width

SOH	F	C	S	C	C	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	-	-	-	x	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set control

SOH	F	C	S	C	D	-	r	M	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

M: 0 = automatic cutter mode
M: 1 = external, cut can be effected by I/O

Get control

SOH	F	C	S	C	D	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	M	-	-	-	-	x	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set cutting speed

SOH	F	C	S	C	E	-	r	N	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0 = very slowly
N: 1 = slowly
N: 2 = normal
N: 3 = quick
N: 4 = very quick

Get cutting speed

SOH	F	C	S	C	E	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	-	-	-	x	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set automatic return On/Off

SOH	F	C	S	C	F	-	r	N	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0 = Off
N: 1 = On (default)

Get automatic return On/Off

SOH	F	C	S	C	F	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set mechanical distance between cutter and focal line

SOH	F	C	S	C	G	-	r	N	N	N	N	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNNN = Distance between cutter and focal line
in 1/10 mm (0 ... 9999)

Get mechanical distance between cutter and focal line

SOH	F	C	S	C	G	-	w	p	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	N	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

10.3 Dispenser I/O

Set dispenser mode

SOH	F	C	D	C	-	-	r	N	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0 = Dispenser mode Off

N: 1 = External I/O static

N: 2 = Dispenser photocell

N: 3 = External I/O static continuous

N: 4 = Dispenser photocell continuous

N: 5 = External I/O dynamic

N: 6 = External I/O dynamic continuous

Get dispenser mode

SOH	F	C	D	C	-	-	w	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set dispenser level photocell

SOH	F	C	C	F	-	-	r	V	N	N	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

V = pre-sign of offset (always +)

NN = offset value, 2 digit ASCII number in 1/10 Volt (5 ... 40)

Get dispenser level photocell

SOH	F	C	C	F	-	-	w	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	V	N	N	-	-	-	-	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set sensitivity of dispenser photocell

SOH	F	C	C	F	A	-	r	N	N	N	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNN = Indication of photocell sensitivity

3 digit ASCII number (001 ... 255)

Get sensitivity of dispenser photocell

SOH	F	C	C	F	A	-	w	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	V	N	N	-	-	-	-	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Get status of I/O inputs

SOH	F	C	M	D	A	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	1	2	3	4	5	6	7	8	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Inputs 1-8 / IO port 1-8:

- 1 = Port active
- 0 = Port not active
- = Port not connected, signal blocked or output

Get status of I/O inputs

SOH	F	C	M	D	A	B	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	---	---	---	---	---	---	---	-----

Inputs 1-16 / IO port 1-16:

- 1 = Port active
- 0 = Port not active
- = Port not connected, signal blocked or output

Get status of I/O outputs

SOH	F	C	M	D	B	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	1	2	3	4	5	6	7	8	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Outputs 1-8 / IO port 9-16:

- 1 = Port active
- 0 = Port not active
- = Port not connected, signal blocked or input

Get status of I/O outputs

SOH	F	C	M	D	B	B	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	---	---	---	---	---	---	---	-----

Outputs 1-16 / IO port 1-16:

- 1 = Port active
- 0 = Port not active
- = Port not connected, signal blocked or input

Set IN signal level

SOH	F	C	M	D	C	-	r	1	2	3	4	5	6	7	8	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

IO port 1-8 (dispenser inputs 1-8):

- 2 = Increased and decreased
- 1 = Increased
- 0 = Decreased
- s = I/O signal by interface
- x = I/O signal blocked

Only possible for IO ports that are specified as input.

Get IN signal level

SOH	F	C	M	D	C	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	1	2	3	4	5	6	7	8	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set IN signal level

SOH	F	C	M	D	C	B	r	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	-----

IO port 1-16 (dispenser inputs 1-16):

- 2 = Increased and decreased
- 1 = Increased
- 0 = Decreased
- s = I/O signal by interface
- x = I/O signal blocked

Only possible for IO ports that are specified as input.

Get IN signal level

SOH	F	C	M	D	C	B	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	---	---	---	---	---	---	---	-----

Set OUT signal level

SOH	F	C	M	D	D	-	r	1	2	3	4	5	6	7	8	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

IO port 9-16 (dispenser outputs 1-8):

- 1 = Signal level 1
- 0 = Signal level 0
- s = I/O signal by interface
- x = I/O signal blocked

Only possible for IO ports that are specified as output.

Get OUT signal level

SOH	F	C	M	D	D	-	w	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	1	2	3	4	5	6	7	8	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set OUT signal level

SOH	F	C	M	D	D	B	r	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	-----

IO port 1-16 (dispenser output 1-16):

- 1 = Signal level 1
- 0 = Signal level 0
- s = I/O signal by interface
- x = I/O signal blocked

Only possible for IO ports that are specified as output.

Get OUT signal level

SOH	F	C	M	D	D	B	w	p	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	---	---	---	---	---	---	---	-----

Set software input

SOH	F	C	M	D	F	-	r	1	2	3	4	5	6	7	8	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

IO port 1-8 (dispenser inputs 1-8):

- 1 = Set software input
- 0 = Delete software input
- = Ignore software input
- P = Pulse, run software input once

Only possible for IO ports whose input signal levels are activated for interface.

Example: Activate a start impulse
 (SOH) FCMDF-rP----- (ETB)

Set software input

SOH	F	C	M	D	F	B	r	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	-----

IO port 1-16 (dispenser inputs 1-16):

- 1 = Set software input
- 0 = Delete software input
- = Ignore software input
- P = Pulse, run software input once

Only possible for IO ports whose input signal levels are activated for interface.

An IO port that was set (1) must be deleted (0) first to activate a function when next setting (1).

Example: Activate a start impulse
 (SOH) FCMDFB-rP----- (ETB)

Set software output

SOH	F	C	M	D	G	-	r	1	2	3	4	5	6	7	8	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

IO Port 9-16 (dispenser outputs 1-8):

- 1 = Set software output
- 0 = Delete software output

Only possible for IO ports whose output signal levels are activated for interface.

Set software output

SOH	F	C	M	D	G	B	r	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	-----

IO Port 1-16 (dispenser outputs 1-16):

- 1 = Set software output
- 0 = Delete software output

Only possible for IO ports whose output signal levels are activated for interface.

Set dispenser offset

SOH	F	C	S	D	A	-	r	V	N	N	N	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

V = prefix of offsets (always +)

NNN = offset value, 3 digit ASCII number in 1/10 mm

Get dispenser offset

SOH	F	C	S	D	A	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	V	N	N	N	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set start signal delay

SOH	F	C	S	D	D	-	r	N	N	N	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNN = start signal delay in 1/100 s (0 ... 999)

Get start signal delay

SOH	F	C	S	D	D	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set save start signal

SOH	F	C	S	D	E	-	r	N	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0 = Off

N: 1 = On

Get save start signal

SOH	F	C	S	D	E	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set cancel continuous printing (operating mode)

SOH	F	C	S	D	F	A	r	N	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0 = Off

N: 1 = On

Get cancel continuous printing (operating mode)

SOH	F	C	S	D	F	A	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Dispenser photocell**Get status of dispenser photocell**

SOH	F	C	M	B	E	A	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0 = no label at photocell

N: 1 = label at photocell

The set switching threshold of dispenser photocell is taken into consideration.

10.4 Scanner

Set scanner operating mode

SOH	F	C	D	M	-	-	r	M	P	N	F	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

M: 0 = Scanner mode Off

M: 1 = Mode 1 (data comparison)

M: 2 = Mode 2 (check only readable)

M: 3 = Mode 3 (check readability, graphic)

P: 0 = Interface COM1

P: 1 = Interface COM2

P: 1 = This parameter is ignored as COM2 is always used as scanner interface at the moment.

N: - = 0 bad readings (NoReads)

N: 0 = 1 bad reading

N: 1 = 2 bad readings

N: 2 = 3 bad readings

N: 3 = 4 bad readings

N: 4 = 5 bad readings

N: 5 = 6 bad readings

N: 6 = 7 bad readings

N: 7 = 8 bad readings

N: 8 = 9 bad readings

Number of consecutive bad readings after which an error message appears.

At '-' (0 NoReads) no error message appears, i.e. the print is not interrupted. Only a warning is displayed at the screen.

F: 0 = No label feed (FeedLabel)

F: 1 = 1 label is fed

F: 2 = 2 labels are fed

F: 3 = 3 labels are fed

F: 4 = 4 labels are fed

F: 5 = 5 labels are fed

Get scanner operating mode

SOH	F	C	D	M	-	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	M	P	N	F	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set scan offset

SOH	F	C	D	M	A	-	r	N	N	N	N	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N = scan offset in 1/10 mm

Get scan offset

SOH	F	C	D	M	A	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	N	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N = current scan offset in 1/10 mm

Set scan length

SOH	F	C	D	M	B	-	r	N	N	N	N	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N = scan length in 1/10 mm

Get scan length

SOH	F	C	D	M	B	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	N	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N = current scan length in 1/10 mm

Set scan mode

SOH	F	C	D	M	C	-	r	N	N	N	N	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0 = scanning during printing

N: 1 = scanning after printing

Enquire scan mode

SOH	F	C	D	M	C	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N = current scan mode

Set scan delay (scanning after printing)

SOH	F	C	D	M	D	-	r	N	N	N	N	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N = scan delay in ms [0 ... 9990]

Get scan delay

SOH	F	C	D	M	D	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	N	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N = current scan delay in ms

Set scan timeout (scanning after printing)

SOH	F	C	D	M	E	-	r	N	N	N	N	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N = scan timeout in ms [0 ... 9990]

Get scan timeout

SOH	F	C	D	M	E	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	N	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N = current scan timeout in ms

Set scanner type

SOH	F	C	D	M	F	-	r	N	N	N	N	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0 = SICK CLP100

N: 1 = SICK CLV4XX

N: 2 = DATALOGIC DS2XXX

N: 3 = SICK ICR803

N: 4 = SICK ICR840

Get scanner type

SOH	F	C	D	M	F	-	w	p	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	p	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N = currently set scanner type

Scanner Variable

In mode 1 (data comparison) it is necessary to fix the order of bar code data to scan several codes onto one label. Because of this reason bar code data has to be defined as scanner variable in text sets. The text set has the following structure:

SOH	BM	[n]	=	S	V	(	a	;	f	)	text data	ETB
-----	----	-----	---	---	---	---	---	---	---	---	-----------	-----

=SV: identification scanner variable

a: field active (0 = not active, 1 = active, i.e. code is scanned)

f: field number for definition of code order (1 ...)

Examples:

Fixed text:

(SOH)BM[1]=SV(1;1)123456(ETB)

Variable text (counter):

(SOH)BM[1]=SV(1;1)=CN(10;0;4;+1;1)0001(ETB)

11 Configuration & Status

Save configuration permanent

In case you want to save the described settings permanent into the printer, then you have to transmit the following command to the printer.

SOH	F	X	-	-	-	-	r	N	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0 = save current parameter

N: 1 = set all parameters to default values

Then the printer performs a restart

Read configuration

SOH	F	X	-	-	-	-	w	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

The printer sends as answer all current settings as parameter sets.

Status enquiry

Host computer can receive information about the printer by the serial interface.

The status enquiry has the following data format:

SOH	S	ETB
-----	---	-----

Status return information

After receiving the status enquiry the printer sends the corresponding status return information.

Data format of status enquiry

SOH	1. Byte	2. Byte	5.-1. digit	ETB
	8 7 6 5 4 3 2 1	8 7 6 5 4 3 2 1		

1. Byte	=	1. Status byte
		8. Bit = free 7. Bit = always set 6. Bit = free 5. Bit = 1 = running print order 0 = no. of items (0 = no print order) 4. Bit = 1 = press stop key 0 = not pressed stop key 3. Bit = cutter error (0 = no error; 1 = error) 2. Bit = label material (0 = no error; 1 = error) 1. Bit = transfer ribbon (0 = no error; 1 = error)
2. Byte	=	2. Status byte
		8. Bit – 4. Bit = free 3. Bit = Compact Flash card 2. Bit = Mask set 1. Bit = Printhead temperature
5.-1. digit	=	number of pieces with 5 digits as ASCII characters min. '00000' / max. '65535'

11.1 Autostatus

The printers are equipped with an auto status function, i.e. in certain operating modes the printer actively sends the corresponding status. This can be enquired by the serial interface.

To activate the auto status, the host computer has to send the following command to the printer:

SOH	G	1. Byte	2. Byte	ETB
-----	---	---------	---------	-----

Each of the below indicated message which is observed and send by the printer has to be transmitted with a set Bit (see table below 1. Byte and 2. Byte) to the printer by means of auto state function. The printer sends after each performed condition the corresponding message (answer) to the host computer.

The following messages are provided:

1 Start of generation

2 End of generation

The printer sends this state in case data for a complete label was generated. The test print was not taken into consideration. For counters/date variables the printer sends for each label a status cycle (start, end).

3 Start of printing

4 End of printing

The start of the print is send in case the generated data is send. The end of the print is send in case the print of the label is finished and the motor has stopped.

5 Start of cutting

6 End of cutting

This status describes the cutting. It can be checked for timeout and the end of the cut movement → error.

7 Start of feeding

8 End of feeding

This status is send in case an additional feeding (dispenser, cutter, tear off) is released.

9 Start of a print order

10 End of print order

This status signalizes the start and end of a complete print order (1...99999 labels). This status is active in all operating modes.

11 Error

This status message is send in case an error occurs.

12 Printing stopped

This message is send if the printing is stopped.

13 Printing resumed

This message is send if the printing is resumed.

The printer sends the auto status in the following format to the host computer:

SOH	G	1. Byte	2. Byte	ETB
-----	---	---------	---------	-----

1. Byte

- | | |
|------------------------------|------------------------|
| 8. Bit = start of generation | 4. Bit = start cutting |
| 7. Bit = end of generation | 3. Bit = end of cut |
| 6. Bit = start printing | 2. Bit = start feeding |
| 5. Bit = end of print | 1. Bit = always 0 |

2. Byte

- | | |
|-------------------------------|---------------------------|
| 8. Bit = end of label feed | 4. Bit = free |
| 7. Bit = start of print order | 3. Bit = printing stopped |
| 6. Bit = end of print order | 2. Bit = printing resumed |
| 5. Bit = error | 1. Bit = always 0 |



NOTICE!

Bit 1 has to be in 1. Byte and 2. Byte always 0, otherwise the printer possibly could recognize SOH or ETB.

At the status message of the printer to the host computer always at least 1 Bit is set. However, it could be occur that several Bits are set at the same time.

At the status demand of the host computer to the printer it is also possible that several Bits are set at the same time.

The auto status demand is saved in the printer, i.e. it is set to 0 after switching off/on. Therefore it is necessary to demand it anew after each time the printer is switched on.

Example

The printer should observe the start of a print order. For this the host computer sends the following demand to the printer.

SOH	G	00000000	01000000	ETB
-----	---	----------	----------	-----

After the condition is fulfilled (= start of the print order) the printer sends the following message to the host computer:

SOH	G	00000000	01000000	ETB
-----	---	----------	----------	-----

With regard to the contents the answer corresponds always to the format set.

12 Monitored Printing

This protocol replaces the outdated Autostatus. In contrary to the Autostatus, this is not a binary protocol but a text-based protocol sending the commands as English clear text. The advantage is a very fast and simple error tracing and development. The disadvantage of a larger data volume plays nowadays a smaller role.

12.1 Short Introduction

In order to activate monitored printing:

(SOH)FHM---rSE(ETB)

(SOH)FHA---r2(ETB)

12.2 Parameter Sets (Host – Printer)

Formatting: # - SOH * - ETB

Command: Set monitoring mode.

Syntax: #FHM---rSEPnnnCnFn*

Example: #FHM---rSP10E*

Description: Activates the forwarding of certain events to the server. The results are:

S - (start/stop): print start, print end, stop printing, continue printing, cancel printing.

E – (error): Error occurred, error confirmed.

C – (photocell): Activates the photocell test (n=1)/disable (n=0)

F – Activates the encoder profile (n=1)/disable (n=0)

P – (progress): Print progress, indicates the number of already printed labels. In standard case, the interval between two events is a label. If a number behind the flag is indicated, an event every *nnn* labels is released (see example). With column printing the event is released, as soon as the entered interval was reached or exceeded for the first time (example: 3 columns, interval 4, 20 labels in total. Event at label 6,9,12 and 18).

Command: Activate, disable the monitoring.

Syntax: #FHA---rn*

Example: #FHA---r2*

Description: activated, deactivates the monitoring (n=[0,2]);
,0' – enables the monitoring after completion of print order,
,1' – reserved
,2' – activates the monitoring for the current port.

12.3 Direct Enquiry

Command: Requests print status.

Syntax: #FHS---r*

Example: #FHS---r*

Description: Invites the client to send the current status.

Command: User command to the sender of print order.

Syntax: #FHU---rDaten*

Example: #FHU---rSE*

Description: Sends #Data* to the sender of print order.
Max 100 characters.

12.4 Answer Sets (Printer – Host)

Event: Print start

Set: #HSStart-Pagename-Labelsrequested*

Example: #HSStart-NoName1-100*

Description: Indicates the start of a print order, including page name and number of labels to be printed.

Event: Printing completed

Set: #HSDone-Pagename-Labelsprinted*

Example: #HSDone-NoName1-100*

Description: Indicates the completion of a print order including page name and number of printed labels.

Event: Printing stopped

Set: #HSHold-Pagename-Labelsprinted*

Example: #HSHold-NoName1-10*

Description: Indicates the stopping of print order including page name and number of printed labels. Occurs when the user stopped the print order and/or after occurrence of an error.

Event: Continue printing

Set: #HSContinue-Pagename-Labelsprinted*

Example: #HSContinue-NoName1-55*

Description: Indicates the continuation of print order including page name and number of printed labels. Occurs when the user restarts the print order.

Event: Cancel printing

Set: #HSAborted-Pagename-Labelsprinted*

Example: #HSAborted-NoName1-57*

Description: Indicates the cancelation of printing including page name and number of printed labels.


Event: Error**Set:** #HSError-*Pagename-Labelsprinted-ErrorID-Errormessage****Example:** #HSError-NoName1-57-28-Messerfehler***Description:** Indicates the occurrence of an error including page name, number of printed labels, error ID and error text.**Event:** Error confirmation at printer**Set:** #HSAck-*Pagename-Labelsprinted* ***Example:** #HSAck-NoName1-57***Description:** Indicates the confirmation of an error including page name and number of printed labels.**Event:** Print progress**Set:** #HSPProgress-*Pagename-Labelsprinted* ***Example:** #HSPProgress-NoName1-60***Description:** Indicates the progress of print order including page name and number of printed labels. This event is also returned as answer to status enquiry, if the printer is printing.**Event:** Photocell value**Set:** #HSPhotocell-DLS:xxx-RLS:xxx***Example:** #HSPhotocell-DLS:3.8-RLS:1.9***Description:** Returns the values of transmission and reflexion photocell. The verification takes place every 5 ms; only changes are sent.**Event:** Encoder profile**Set:** # HSEnc-Dist:xxx-Speed:xxx***Example:** # HSEnc-Dist:120-Speed:202***Description:** Generates the profile of speed development of the packaging machine during a print order.**Event:** Answer to status enquiry (#FHS---r*)**Description:** The respective current print event is returned.

12.5 Sample Label

A simple label with monitoring of all parameters with output of the progress – all 10 labels could look as following:

```
FHM---rSP10E
//Ueberwachung einschalten
FHA---r2
// JOBNAME: "ETIKETT1"
FBE---rETIKETT1
// TYPE: Endlosetiketten
// HEIGHT: 20.00 mm
// GAPLENGTH: 2.00 mm
// COLUMNS: 1
// COLUMN DISTANCE: 100.00 mm
FCDA--r1-----
FCCL--r0002000-
FCCM--r00000---
FCCHA-r1-----
FCCHB-r999-----
// SPEED: 50 mm/s
FCAA--r050-----
// CONTRAST: 200%
FCAB--r200-----
// LABELCONTROL: 0
FCDE--r0-----
// RIBBONCONTROL: 1
// RIBBONSENS: 0
FCDB--r10-----
// MATERIAL: Typ 1
FCDNA-r0-----
FCDNB-r1-----
FCDNC-r0000----
// SCAN MODE: 0
// SCAN PORT: 0
// NO READ: 0
// FEED LABEL: 0
FCDM--r0000----
// MIRROR LABEL: Nein
FCDO--r0-----
// TEXT (1/100 mm)
AM[1]1407;6907;0;4;0;3;398;398;8
BM[1]Test
// SETLINENO: 1 lines
FBAA--r1
// SETCOPIES: 1
FBBA--r00050---
// PRINT
FBC---r-----
```

The server output, for example, looks as follows:

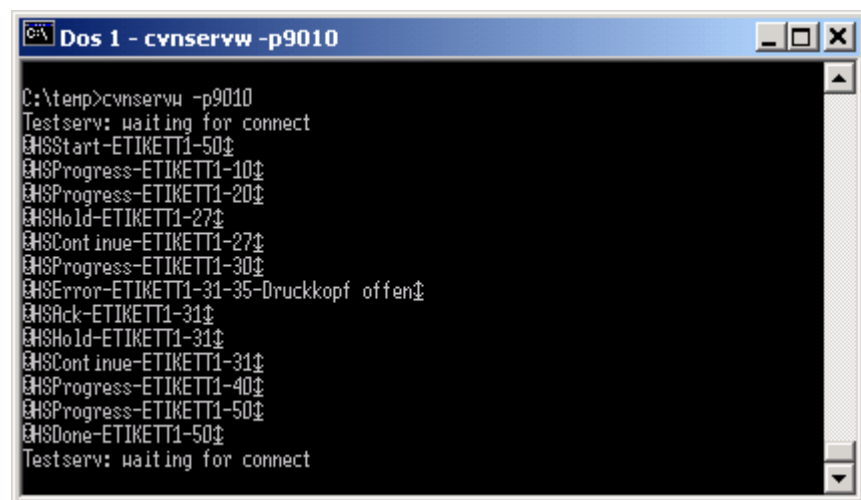

13 Font Examples

13.1 Bitmap Fonts (Not Proportional)

Font 01 (8 x 11) Verhältnis 3:3
 Font 02 (12 x 17) Verhältnis 3:3
 Font 03 (18 x 26) Verhältnis 2:2
 Font 04 (40 x 56) Verhältnis 1:1
 Font 05 (18 x 32 mit Unterlängen) Verhältnis 2:2
 Font 07 (12 x 22 mit Unterlängen) Verhältnis 2:2

13.2 Bitmap Fonts (Proportional)

Font 21 (10 proportional) Verhältnis 3:3
 Font 22 (18 proportional) Verhältnis 2:2
 Font 23 (26 proportional) Verhältnis 2:2
 Font 24 (56 proportional) Verhältnis 1:1
 Font 28 (40 proportional) Verhältnis 1:1
 Font 29 (8 proportional) Verhältnis 5:5

13.3 Vector Fonts

Absender (Baskerville) Das ist ein Musteretikett
 Gold, Petra (Swiss Light) für die Darstellung der
 Name, Vorname (Helvetica Bold) Schriftarten (Monospace)

Goldstraße 456 (Swiss Light)
 Straße, Hausnummer (Helvetica Bold)
 23456 Golddorf (Swiss Light)
 PLZ, Ort (Helvetica Bold)

Musterlieferung
Bitte bestätigen Sie
den Empfang. (Brush Script)

Empfänger (Baskerville)
 Mustermann, Max (Helvetica Roman)
 Name, Vorname (Helvetica Bold)
 Musterstraße 123 (Helvetica Roman)
 Straße, Hausnummer (Helvetica Bold)
 45678 Musterstadt (Helvetica Roman)
 PLZ, Ort (Helvetica Bold)

14 Index

#

*FBAA, number of lines.....	89
*FBBA, total items of print order	90
*FBBB, labels still to print.....	90
*FBBC, already printed labels.....	90
*FBBD, interval (cutter)	90
*FBC, start printing.....	91
*FBD, start printing (w/o tear-off offset)	91
*FBE, start printing (assign printjob identifier)	91
*FBF, initialisation of page handling	91
*FBG, selection of current page.....	91
*FBH, order of pages	91
*FBI, generation of page w/o print start	91
*FCAA, print speed	61
*FCAB, contrast	56
*FCB, measure label.....	53
*FCCA, label synchronization at switching on	66
*FCCB, buzzer	64
*FCCD, y offset	73
*FCCE, x offset	73
*FCCF, dispenser level photocell	102
*FCCFA, sensitivity dispenser photocell	102
*FCCG, tear off offset	73
*FCCHA, column printing (no. of columns).....	55
*FCCHB, column printing (column width)	55
*FCCJ, alignment.....	55
*FCK, keyboard layout	64
*FCCL, label length.....	54
*FCCM, gap length	54
*FCCN, codepage.....	63
*FCCO, label width	54
*FCCP, external printer parameters	62
*FCCR, zero point adjustment (x value)	75
*FCCR, zero point adjustment (y value)	75
*FCDA, label type	53
*FCDB, transfer ribbon control.....	61
*FCDC, operating mode (dispenser I/O).....	102
*FCDD, operating mode (cutter)	99
*FCDE, label photocell.....	53
*FCDEA, scan position	57
*FCDEB, sensitivity transmission photocell	58
*FCDEC, sensitivity reflexion photocell	58
*FCDGA, label error length.....	54
*FCDGB, synchronization	55
*FCDI, printer language	62
*FCDJ, ribbon saving.....	61
*FCDJC, CMI length	66
*FCDK, field handling.....	62
*FCDM, scanner operating mode	108
*FCDMA, scan offset	108
*FCDMB, scan length	109
*FCDMC, scan mode	109

*FCDMD, scan delay	109
*FCDME, scan timeout	109
*FCDMF, scanner type	110
*FCDN, rotate label	56
*FCDNC, material selection	57
*FCDND, rotate label in 90 degrees	57
*FCDO, flip label	56
*FCDS, flip/rotate label	56
*FCDU, customized entry	63
*FCDW, hotstart	64
*FCDX, autoload	65
*FCFF, interface parameters	67
*FCGC, SOH/ETB.....	67
*FCGD, data memory	68
*FCGEA, reaction unknown questions	68
*FCHA, paper counter printer	79
*FCHB, paper counter printhead	79
*FCIA, date	80
*FCIB, time.....	80
*FCIG, automatic clock adjustment	81
*FCIH, beginning of summertime	82
*FCII, end of summertime	82
*FCIJ, time shifting.....	82
*FCKA, password.....	83
*FCKB, function group (password)	83
*FCKDA, password function menu	84
*FCKDB, password favorites menu	84
*FCKDC, password memory card.....	84
*FCKDD, password printing manually	84
*FCLA, IP address (network)	69
*FCLB, netmask (network).....	69
*FCLC, gateway address (network).....	69
*FCLD, transmission mode (network).....	70
*FCLE, DHCP support (network)	70
*FCLF, printer name (network)	70
*FCLMB, MAC address (network)	70
*FCLNI, NTP server IP (network)	71
*FCLNS, NTP status (network).....	72
*FCLNZ, time zone (network)	72
*FCLZ, reset network device (network)	72
*FCMAA, label parameter a.....	59
*FCMAB, label parameter b.....	59
*FCMAC, label parameter c.....	59
*FCMBA, transfer ribbon photocell	59
*FCMBB, label photocell	60
*FCMBC, close printhead	76
*FCMBC, printhead photocell	60
*FCMBD, open printhead.....	76
*FCMBEA, dispenser photocell	60, 107
*FCMC, printhead temperature.....	77
*FCMCA, printhead locking.....	76
*FCMDA, I/O inputs	103
*FCMDAB, I/O inputs.....	103
*FCMDB, I/O outputs	103
*FCMDBB, I/O outputs.....	103
*FCMDC, in signal level.....	104
*FCMDCB, in signal level.....	104

*FCMDD, out signal level.....	104
*FCMDDDB, out signal level	105
*FCMDF, software input.....	105
*FCMDFB, software input	105
*FCMDG, software output.....	106
*FCMDGB, software output	106
*FCMG, printhead resistance	78
*FCMH, reset error.....	89
*FCMHA, error ID/error text	89
*FCMKC, online/offline.....	75
*FCMKD, reprint action	76
*FCMKE, standard label	65
*FCMLA, ribbon prior warning	77
*FCMLB, ribbon prior warning diameter	77
*FCMLC, ribbon diameter	77
*FCMLDA, mode (ribbon prior warning)	78
*FCMLDB, reduced speed (ribbon prior warning)	78
*FCMP, winder output.....	76
*FCMQ, status print	92
*FCMRA, backfeed operating mode	65
*FCMRB, backfeed delay.....	65
*FCMT, print length correction	78
*FCNRA, custom logo.....	79
*FCSCA, offset (cutter)	99
*FCSCA, offset cutter.....	74
*FCSCB, double cut (cutter)	99
*FCSCC, cut width (cutter).....	100
*FCSCD, control (cutter).....	100
*FCSCE, cutting speed (cutter)	100
*FCSCF, automatic return (cutter)	100
*FCSCG, distance cutter-focal line (cutter).....	101
*FCSDA, offset (dispenser I/O).....	106
*FCSDA, offset dispenser	74
*FCSDD, start signal delay	106
*FCSDE, save start signal	107
*FCSDFA, continuous printing (operating mode) cancel.....	107
*FCSDFC, label change confirmation	66
*FCWB, high speed baud rate (WLAN)	98
*FCWC, connection status.....	95
*FCWD, DHCP support.....	95
*FCWE, encryption type (WLAN).....	95
*FCWF, MAC address (WLAN)	95
*FCWG, gateway address (WLAN)	96
*FCWH, high speed data connection (WLAN).....	98
*FCWI, IP address (WLAN)	96
*FCWK, WPA/WPA2 encryption (WLAN)	96
*FCWM, netmask (WLAN)	96
*FCWP, server port (WLAN).....	96
*FCWR, readout and transfer configuration (WLAN).....	97
*FCWS, SSID identification (WLAN).....	97
*FCWV, WEP64 encryption (WLAN)	97
*FCWW, WEP128 encryption (WLAN)	97
*FCWX, save settings and restart (WLAN).....	97
*FD, start/stop command	89
*FE, feed	92
*FF, test print	92
*FGA, cancel print order	92

*FMA, save label (CF card).....	85
*FMB, load file (cf card)	85
*FMC, delete layout (cf card)	85
*FMD, format (cf card)	85
*FMG, table of contents (cf card).....	85
*FMH, memory space (cf card).....	86
*FMI, create directory (cf card)	86
*FMJ, delete directory (cf card).....	86
*FMJA, delete directory path (cf card)	86
*FMK, change directory (cf card)	86
*FMKB, standard directory via I/O (cf card)	87
*FML, transfer file (cf card)	87
*FMM, enquiry if the file exists (carte cf).....	87
*FMP, size of cf card.....	87
*FMS, drive status (Ccfcard).....	88
*FZ, emulation.....	92

A

autoload.....	65
---------------	----

B

backfeed	
delay	65
operating mode.....	65
buzzer.....	64

C

clock adjustment, automatical	
beginning of summertime	82
end of summertime	82
time shifting.....	82
codepage.....	63
column printing	55
compact flash card	
change directory	86
create directory	86
delete directory	86
delete directory path	86
delete layout	85
drive status	88
enquiry if the file exists	87
format card.....	85
load file.....	85
readout free memory space.....	86
save label.....	85
size of cf card.....	87
standard directory via I/O.....	87
transfer file	87
configuration and status	
autostatus	112, 113
saving.....	111
status enquiry	111
status return information	111
configuration, readout and transfer (WLAN)	97
connection status (WLAN).....	95
contrast.....	56
custom logo	79
customized entry	63
cutter	

automatic return	100
control	100
cut width.....	100
cutting speed	100
distance cutter-focal line	101
double cut	99
mode	99
offset	74, 99

D

data format	
explanation	12
field attributes	13
field name	14, 15, 16, 17, 18
field properties	13
general information	11
Data format	
Field selection	18
data memory	68
date/time	
automatic clock adjustment	82
automatical clock adjustment	81
date	80
time	80
datum point (text, bar code, graphic)	9
DHCP support	
network	70
WLAN.....	95
dispenser I/O	
continuous printing (operating mode)	107
dispenser level photocell	102
dispenser photocell.....	107
I/O inputs	103
I/O outputs	103
in signal level	104
mode	102
offset	106
out signal level	104, 105
save start signal	107
sensitivity dispenser photocell	102
software input	105
software output	106
start signal delay	106
dispenser photocell	60
double cut, parameter set.....	99

E

emulation	92
encryption (WLAN)	
type	95
WEP128.....	97
WEP64.....	97
WPA/WPA2	96
external printer parameters	62

F

feed.....	92
field handling	62
flip label	56
font examples	

bitmap fonts (not proportional).....	119
bitmap fonts (proportional).....	119
font examples.vector fonts	119
format identifier, date/time	41, 42, 43

G

gap length.....	54
gateway address	
network	69
WLAN.....	96
generation, selected page	91
graphic set	
general graphic format.....	35
PCX format	35, 36

H

high speed data connection (WLAN)	98
highspeed baud rate (WLAN).....	98
hotstart.....	64

I

in signal level (dispenser I/O)	104
initialisation of page handling	91
inputs I/O (dispenser I/O)	103
interface	
parameters.....	67
SOH/ETB	67
IP address	
network	69
WLAN.....	96

K

keyboard layout	64
-----------------------	----

L

label	
alignment	55
column printing	55
flip	56
label change confirmation.....	66
label error length.....	54
label photocell.....	53, 60
Label type	53
length	54
measure	53
rotate.....	56
standard label	65
synchronization at switching on.....	66
width.....	54
label parameters	
column printing	55
contrast	56
flip label.....	56
gap length	54
label alignment.....	55
label error length.....	54
label length	54
label photocell.....	53
label rotation in 90 degrees	57

label type	53
label width	54
level maximal (label parameter b)	59
material selection	57
measure label	53
reflexion transmission photocell	58
rotate label	56
scan position	57
sensitivity transmission photocell	58
synchronization	55
label photocell	
level minimal (label parameter b)	59
switching threshold (label parameter c)	59
label rotation in 90 degrees	57
line number	89

M

MAC address	
network	71
WLAN	95
mask set	
bar code Aztec code	30
bar code CODABLOCK F	27
bar code DataMatrix	25
bar code GS1 DataMatrix	26
bar code MAXICODE	24
bar code PDF417	23
bar code QR Code	29
bar code, GS1 DataBar (RSS)	28
bar code, ITF	22
bar code, one-dimensional	21
internal graphic	32
line	31
rectangle	31
text	19, 20
material selection	57
measure, label	53
monitored printing	115, 116, 117, 118

N

netmask	
network	69
WLAN	96
network	
DHCP support	70
gateway address	69
IP address	69
MAC address	71
netmask	69
NTP server IP	71
NTP status	72
printer name	70
reset network device	72
time zone (hour offset)	72
transmission mode	70
NTP server IP	71
NTP status	72

O

offset values	
---------------	--

cutter	74
dispenser	74
tear off offset	73
x offset	73
y offset	73
online/offline	75
order (pages to print)	91
out signal level (dispenser I/O)	104, 105
outputs I/O (dispenser I/O)	103

P

paper counter	
printer	79
printhead	79
parallel data transmission, connection plan	7
parameter sets	
compact flash card	85, 86, 87, 88
data memory	68
date/time	80, 81, 82
emulation	92
Interface	67
interface protocol	67
label parameters	53, 54, 55, 56, 57, 58
network	69, 70, 71
offset values	73
password	83, 84
password favorites menu	84
password function menu	84
password memory card	84
password printing manually	84
photocells	59, 60
printer parameters	61, 62, 63, 64, 65, 66
printing	89, 90, 91, 92
service functions	77, 78
service funtions	75, 76
parameter sets (options)	
cutter	99, 100
dispenser I/O	102, 103, 104, 105, 106, 107
scanner	108, 109, 110
WLAN	95, 96, 97, 98
password	83, 84
photocell	
dispenser photocell	60
label photocell	60
level maximal (label parameter a)	59
level minimal (label parameter a)	59
printhead photocell	60
switching threshold	59
transfer ribbon photocell	59
photocell, label photocell	53
print length correction	78
print order, cancel	92
print speed	61
printer	
language	62
name	70
printer parameters	
autoload	65
backfeed, delay	65
backfeed, operating mode	65

buzzer	64
CMI length	66
codepage	63
customized entry	63
external printer parameters	62
field handling	62
hotstart	64
keyboard layout	64
label change confirmation	66
label synchronization at switching on	66
print speed	61
printer language	62
ribbon saving	61
standard label	65
transfer ribbon control	61
printhead	
down (closed)	76
locking	76
resistance	78
temperature	77
up (open)	76
printhead photocell	60
printing	
cancel print orders	92
feed	92
generation of selected page	91
initialisation of page handling	91
Item number of print order	90
number of lines	89
print order	91
reset error	89
selection of current page	91
start printing	91
start/stop command	89
status printing	92
test print	92
printing, start	91

R

reaction, unknown questions	68
reprint action	76
reset error	89
reset network device	72
ribbon saving	61
rotate label	56
rotation (text, bar code, graphic)	9

S

save settings and restart (WLAN)	97
scan position	57
scanner	
operating mode	108
scan delay	109
scan length	109
scan mode	109
scan offset	108
scan timeout	109
scanner type	110
scanner variable	110
sensitivity reflexion photocell	58

sensitivity transmission photocell	58
serial data transmission	
connection plan RS232.....	6
connector assignment.....	5
server port (WLAN)	96
service functions	
custom logo	79
online/offline.....	75
print length correction	78
printhead down (closed)	76
printhead locking.....	76
printhead resistance	78
printhead temperature	77
printhead up (open)	76
reprint action	76
transfer ribbon prior warning.....	77
transfer ribbon prior warning, diameter.....	77
transfer ribbon prior warning, mode.....	78
transfer ribbon prior warning, reduced speed.....	78
winder output	76
zero point adjustment (x value)	75
zero point adjustment (y value)	75
software input (dispenser I/O)	105
software output (dispenser I/O)	106
SOH/ETB.....	67
Speed	61
SSID identification (WLAN)	97
standard label.....	65
start/stop command.....	89
status print.....	92
switching threshold, photocell	59
synchronization	55
synchronization at switching on	66

T

tear off offset	73
test print.....	92
text set	
example	34
general information.....	33
time zone (hour offset)	72
transfer ribbon photocell.....	59
transfer ribbon prior warning	77
diameter.....	77
mode	78
reduced speed	78
transmission mode	70

V

variables	
check digit.....	50
counter	38
counter, extended.....	39
currency variable	44
date/time	40, 41, 42, 43
EPC (Electronic Product Code)	49
GS1-128 parser	48
link field.....	37
memory card data.....	48
set structure	37

shift variable.....	45
substring	51
user guiding	46
user guiding with mask	47

W

winder output.....	76
WLAN	
connection status.....	95
DHCP support.....	95
encryption type	95
gateway address.....	96
high speed baud rate	98
high speed data connection.....	98
IP address.....	96
MAC address	95
netmask	96
readout and transfer configuration.....	97
save settings and restart.....	97
server port.....	96
SSID identification	97
WEP128 encryption	97
WEP64 encryption	97
WPA/WPA2 encryption.....	96

X

x offset.....	73
---------------	----

Y

y offset.....	73
---------------	----

Z

zero point adjustment (x value)	75
zero point adjustment (y value)	75



Carl Valentin GmbH
Neckarstraße 78 – 86 u. 94 . 78056 Villingen-Schwenningen
Phone +49 7720 9712-0 . Fax +49 7720 9712-9901
info@carl-valentin.de . www.carl-valentin.de